



ASHRAE Guideline 44P

**Public Review Draft**

# **Protecting Building Occupants from Smoke During Wildfire and Prescribed Burn Events**

**Second Public Review (June 2024)  
(Draft Shows Proposed **Independent Substantive Changes** to Previous Public  
Review Draft)**

This draft has been recommended for public review by the responsible project committee. To submit a comment on this proposed standard, go to the ASHRAE website at [www.ashrae.org/standards-research--technology/public-review-drafts](http://www.ashrae.org/standards-research--technology/public-review-drafts) and access the online comment database. The draft is subject to modification until it is approved for publication by the Board of Directors and ANSI. Until this time, the current edition of the standard (as modified by any published addenda on the ASHRAE website) remains in effect. The current edition of any standard may be purchased from the ASHRAE Online Store at [www.ashrae.org/bookstore](http://www.ashrae.org/bookstore) or by calling 404-636-8400 or 1-800-727-4723 (for orders in the U.S. or Canada).

This standard is under continuous maintenance. To propose a change to the current standard, use the change submittal form available on the ASHRAE website, [www.ashrae.org](http://www.ashrae.org).

The appearance of any technical data or editorial material in this public review document does not constitute endorsement, warranty, or guaranty by ASHRAE of any product, service, process, procedure, or design, and ASHRAE expressly disclaims such.

© 2024 ASHRAE. This draft is covered under ASHRAE copyright. Permission to reproduce or redistribute all or any part of this document must be obtained from the ASHRAE Manager of Standards, 180 Technology Parkway, Peachtree Corners, GA 30092. Phone: 404-636-8400, Ext. 1125. Fax: 404-321-5478. E-mail: [standards.section@ashrae.org](mailto:standards.section@ashrae.org).

**ASHRAE, 180 Technology Parkway, Peachtree Corners GA 30092**

## TABLE OF CONTENTS

FOREWORD .....	3
1 PURPOSE.....	3
2 SCOPE.....	3
3 DEFINITIONS AND SYMBOLS.....	3
3.1 Definitions.....	3
3.2 List of Acronyms.....	4
4 BACKGROUND .....	4
4.1 Wildland Fires .....	4
4.2 Composition of Wildland Fire Smoke.....	4
4.3 Ambient Air Quality Impacts of Wildland Fire Smoke .....	4
4.4 Focus on Fine Particulate Matter (PM <sub>2.5</sub> ) .....	6
4.5 Health Effects of Wildland Fire Smoke .....	7
4.6 At-risk Populations.....	8
4.7 Indoor Air Quality (IAQ) .....	8
Indoor Infiltration of Fine Particulate Matter (PM <sub>2.5</sub> ) from Wildland Fire Smoke .....	8
4.9 Indoor Fine Particulate Matter (PM <sub>2.5</sub> ) Should be as Low as Reasonably Achievable (ALARA). 8	
4.10 Emerging Technologies.....	10
4.11 Need for this Guideline .....	11
5 DESIGN AND COMMISSIONING .....	11
5.1 Overview .....	11
5.2 Definition of the Design Challenge.....	11
5.3 Selection of Design Outdoor and Indoor Contaminant Levels.....	11
5.4 Design Calculations and Processes .....	11
5.5 Design measures.....	16
5.6 Commissioning.....	20
5.7 Special Building Occupancy Types.....	20
5.8 Communication of the Smoke-Readiness Plan to the Design and Operation Team .....	23
6 OPERATION DURING A WILDLAND FIRE EVENT .....	23
6.1 Developing a Smoke Readiness Plan .....	23
6.2 Preparing for Smoke Events.....	27
6.3 Operational Testing .....	43
6.4 Maintenance and Monitoring During a Smoke Event .....	43
6.5 Returning to Normal Operations .....	44
7 REFERENCES .....	44
INFORMATIVE APPENDIX A – ANALYSIS OF PARTICULATE MATTER CONCENTRATIONS DURING RECENT U.S. WESTERN WILDFIRES .....	54
INFORMATIVE APPENDIX B – MANAGING AIR-SIDE ECONOMIZER AND DEMAND CONTROL VENTILATION FOR SMOKE .....	55

**(This foreword is not part of this guideline. It is merely informative and does not contain requirements necessary for conformance to the guideline.)**

***[Note to Reviewers: This public review draft makes proposed independent substantive changes to the previous public review draft. These changes are indicated in the text by underlining (for additions) and ~~strikethrough~~ (for deletions) except where the reviewer instructions specifically describe some other means of showing the changes. Only these changes to the current standard are open for review and comment at this time. Additional material is provided for context only and is not open for comment except as it relates to the proposed changes.]***

## **FOREWORD**

*In recent years, the incidences of wildland fires have increased in both the number of fires per year, the severity, and duration of each event. In some cases, smoke events have lasted several weeks to months. The smoke produced from wildland fires can have a significant negative impact on ambient air quality both local and distant, which in turn can negatively impact health. This guideline provides detailed information on the impacts of smoke on human health with best practices in both building design and building operation to reduce the impact of prolonged smoke events on indoor air quality. The overarching goal is to reduce exposure of occupants to wildland fire smoke thereby protecting their health and wellbeing.*

## **1 PURPOSE**

The purpose of this guideline is to recommend building measures to minimize occupant health impacts from wildfire and prescribed burn smoke events.

## **2 SCOPE**

**2.1** This guideline applies to commercial buildings; institutional buildings, including healthcare facilities; and multi-unit residential buildings, as well as dedicated spaces within these building types intended for temporary human occupancy during a wildfire or prescribed burn smoke event.

## **3 DEFINITIONS AND SYMBOLS**

### **3.1 Definitions**

***Centrifugal fan surge:*** a phenomenon of increased vibration of sound that can occur when a centrifugal fan is ~~at maximum~~ operates in its region of high fan pressure and low or minimum airflow.

***Fan inlet:*** the suction side area of the fan or fan-equipment fitting provided for connection to attached ductwork.

***Natural ventilation:*** movement of air into and out of a space ~~primarily~~ through intentionally provided openings (such as windows and doors), through nonpowered ventilators, ~~or by infiltration~~.

***Photocatalytic oxidation (PCO):*** a ~~purification~~ process where UV light activates a catalyst ~~to convert airborne contaminants into water and carbon dioxide~~ to form reactive oxygen species which react with other components in air to form byproducts.

**Variable frequency drive (VFD) or variable speed drive (VSD):** electronic device that varies its output frequency and voltage to vary the rotating speed of a motor, given a fixed input frequency. Used with fans or pumps to vary the flow ~~in the system~~ as a function of a ~~maintained~~ system pressure.

### 3.2 List of Acronyms

## 4 BACKGROUND

### 4.1 Wildland Fires

There are many different types of fire that can occur on the landscape, which are broadly classified into controlled fires and wildfires. Controlled fires include prescribed burning for ecological restoration or wildfire risk reduction, land clearing, pile burning of waste biomass, and agricultural fires. Wildfires, on the other hand, are unpredictable and can be caused by human activity or infrastructure, lightning strikes, or when controlled fires escape containment. Although many wildfires are suppressed when they are small, some cannot be suppressed when the weather conditions are unfavorable, and they grow very large.<sup>(1)</sup> When such fires occur at the interface of wildland and human habitation (referred to as wildland urban interface, or WUI), they can burn a vast amount of anthropogenic material in addition to natural biofuels. All fires generate smoke pollution, but large landscape and WUI wildfires often cause episodes of severely degraded air quality that lasts for days, weeks, or months. Prescribed fires, when properly conducted, should be low intensity fires with a defined duration and smoke management plan. This guideline was primarily developed to address episodes of severe wildfire smoke, but it can be applied to smoke from all types of fires, including prescribed burns. As there are different terms used to describe landscape and wildfires and/or prescribed burns, this document will from herein use the term wildland fire smoke as a generic term unless a specific source is being addressed.

Wildfire risk is increasing ~~North America and~~ worldwide, for complex and interrelated reasons.<sup>(2)</sup> Before colonization, Indigenous people in North America, Australia, and elsewhere practiced systematic controlled burning to shape the landscape and maintain ecological balance.<sup>(3)</sup> Settlers in these regions favored fire suppression to protect lives and property, thereby excluding fire from naturally flammable landscapes and causing fuels to accumulate.<sup>(4)</sup> Although forest management practices have been changing over the past decades, the accumulation of landscape fuels is now coinciding with a drier, hotter, and windier climate, which are all conditions that increase wildfire risk.<sup>(5)</sup> In addition, wildfire seasons are getting longer or disappearing in some areas where wildfires can occur at any time of year.<sup>(6)</sup> Overall, we can expect two important trends that will affect smoke pollution in the years ahead: (1) increased frequency, size, and intensity of wildfires; and (2) increased use of controlled, or prescribed fires to reduce wildfire risk.

### 4.2 Composition of Wildland Fire Smoke


### 4.3 Ambient Air Quality Impacts of Wildland Fire Smoke

*Ambient air quality* is a term used to describe the status of outdoor air concerning the mix of air pollutants from all anthropogenic and natural sources. Many jurisdictions have regulatory standards that describe the legally allowable concentrations of different pollutants in ambient air. These concentrations are typically reduced slowly over time to ensure that air quality always improves. The pollutants for which such standards exist are known as criteria air pollutants, and they usually include PM<sub>2.5</sub> and/or PM<sub>10</sub>, O<sub>3</sub>, NO<sub>x</sub>, oxides of sulfur (SO<sub>x</sub>), and carbon monoxide (CO).<sup>(9)</sup> These pollutants are typically measured by a distributed network of regulatory monitoring stations using instruments that meet high standards for accuracy and precision. Concentrations are often logged at 1-minute intervals and reported as 1-hour averages. Many air quality monitoring programs also include measurements of some VOCs, polyaromatic

hydrocarbons (PAH), lead, and other hazardous compounds known as *toxic air pollutants*.<sup>(9)</sup> Most of these compounds must be quantified by laboratory analysis of air samples, so a small number of measurements are made at a small number of locations compared with the criteria air pollutants. Toxic air pollutants are not regulated in the same way as criteria air pollutants. Whereas criteria air pollutants are measured in ambient air to assess compliance, emissions of toxic air pollutants are regulated at their source.

Wildland fire smoke could affect ambient concentrations of all criteria air pollutants, but its biggest impacts are on PM<sub>2.5</sub>.<sup>(7)</sup> Under typical air quality conditions in most high-income countries, the 24-hour average mass concentration of PM<sub>2.5</sub> is less than 25 micrograms of particulate matter per cubic meter of air ( $\mu\text{g}/\text{m}^3$ ) in dense urban environments and less than 10  $\mu\text{g}/\text{m}^3$  in many other locations. In comparison, days affected by moderate wildland fire smoke can have concentrations up to five times higher, and days affected by extreme wildfire smoke can have concentrations more than fifty times higher. Wildfire smoke episodes can last for days, weeks, or months, and their day-to-day PM<sub>2.5</sub> concentrations tend to be highly variable because the fire dynamics change, and the winds shift. In comparison, the effects of smoke on concentrations of other criteria air pollutants are typically quite small (Figure 1).

The effects of wildland fire smoke on ambient concentrations of toxic air pollutants are poorly understood compared with the effects on criteria air pollutants. Because these pollutants are measured infrequently at a small number of locations, existing monitoring networks often do not capture the impacts of smoke. As international interest in smoke grows, there are more research studies designed to characterize its air quality impacts more completely by measuring criteria air pollutants, toxic air pollutants, and the composition of particulate matter.<sup>(10)</sup> Such studies have reported that wildfire smoke can include high concentrations of harmful VOCs, secondary O<sub>3</sub>, PAH, metals, and other compounds, and that the air quality impacts are highly variable.<sup>(11-14)</sup> A recent study conducted with regulatory data compared smoke-impacted and non-smoke-impacted days and reported that the most elevated ambient air toxics were formaldehyde (43% increase on smoke-impacted days), acetaldehyde (36% increase), and acrolein (34% increase).<sup>(15)</sup> While smoke is a complex and dynamic mixture with many constituents that can affect human health, it is important to recognize that only a few can be easily measured in real-time.

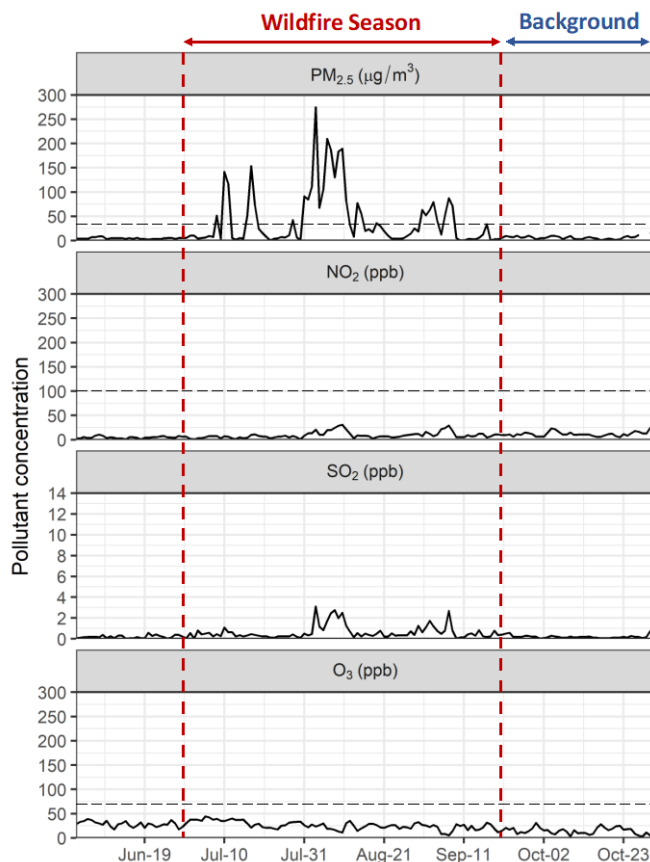

**Figure 1.** Daily 24-hour concentrations (June-October) of fine particulate matter (PM<sub>2.5</sub>), nitrogen dioxide (NO<sub>2</sub>), sulfur dioxide (SO<sub>2</sub>), and ground-level ozone (O<sub>3</sub>) in one community affected by severe wildfire smoke. In each case, the maximum value on the y-axis is the median concentration over the time series multiplied by 45, which reflects the difference between the median and maximum PM<sub>2.5</sub> concentrations. The dashed lines show the most relevant US National Ambient Air Quality Standard (NAAQS) value for PM<sub>2.5</sub> (35 µg/m<sup>3</sup> for a 24-hour average), NO<sub>2</sub> (100 ppb for a 1-hour average), and O<sub>3</sub> (70 ppb for an 8-hour average). The NAAQS for SO<sub>2</sub> is not shown because the value is beyond the maximum of the y-axis (75 ppb for a 1-hour average). The figure demonstrates how elevated PM<sub>2.5</sub> ambient concentrations are during wildfire season compared with the typical background, and how much more elevated PM<sub>2.5</sub> concentrations are than concentrations of other criteria air pollutants.

Evidence on the indoor infiltration of organic and inorganic gases during wildfire smoke is very limited. A recent study measured vapor phase PAH concentrations indoors and outdoors before, during, and after wildfires at 15 locations. They found 12 unique PAHs were only detected in outdoor air during the wildfires, and that PAH concentrations were often higher indoors than outdoors during wildfires, highlighting the importance of indoor sources.<sup>(16)</sup> However, PAHs and other contaminants such as heavy metals can bind to indoor particulate matter, and studies have shown they persist in dust after the outdoor smoke has cleared.<sup>(17, 18)</sup> More general studies on inorganic gases show they have somewhat lower indoor infiltration than PM<sub>2.5</sub>, especially when the windows are closed.<sup>(19)</sup> However, there is not enough information to provide evidence-based guidance on reducing indoor exposure to the gases in wildfire smoke. Limiting indoor infiltration of outdoor air through the building envelope is likely to reduce indoor exposure to gases as well as PM<sub>2.5</sub>. Filtering the indoor air, on the other hand, will reduce exposure to harmful constituents that have adsorbed

to the PM<sub>2.5</sub>, but will not reduce concentrations of gaseous pollutants unless activated carbon or similar technologies are used.

#### 4.4 Focus on Fine Particulate Matter (PM<sub>2.5</sub>)

The mass concentration of PM<sub>2.5</sub> is often used as a proxy for the complex wildland fire smoke mixture, its air quality impacts, and its potential health effects. There are three key reasons for this. The first and most important is that PM<sub>2.5</sub> can penetrate deep into the human lungs, where the particles cause local irritation and systemic inflammation that can affect other organ systems.<sup>(20)</sup> Short-term and long-term exposure to ambient PM<sub>2.5</sub> has been conclusively linked to a wide range of acute and chronic health effects by a large body of scientific research.<sup>(21, 22)</sup> While most of these studies have focused on PM<sub>2.5</sub> from sources other than wildland fire, the growing literature on the health effects of wildland fire smoke has been largely consistent with the broader health evidence on PM<sub>2.5</sub>.<sup>(23-25)</sup> The co-pollutants in wildland fire smoke may cause health effects in addition to or synergistically with those of PM<sub>2.5</sub> exposure, but ~~such health effects are likely to be smaller and more difficult to measure~~ they have not been well studied to date.

#### 4.5 Health Effects of Wildland Fire Smoke

Short-term exposure to PM<sub>2.5</sub> in wildland fire smoke has been associated with a comprehensive and growing range of acute health effects. There is consistent evidence that wildfire smoke exposure leads to higher rates of acute respiratory outcomes, including respiratory symptoms, use of rescue medications, lung function, outpatient physician visits, emergency department visits, ambulance dispatches, hospital admissions, and deaths.<sup>(23,24)</sup> Some of this evidence suggests that the respiratory effects of wildland fire smoke PM<sub>2.5</sub> may be greater than those of PM<sub>2.5</sub> from other sources, even at the same concentrations.<sup>(32,33)</sup> It is not yet clear whether these differences are due to differences in the PM<sub>2.5</sub> composition and toxicity between sources or unmeasured co-pollutants in wildland fire smoke.

Although wildland fire smoke makes first contact with the respiratory system, it can affect many other parts of the body due to the inflammation and oxidative stress it causes in the lungs. There is increasingly consistent evidence that short-term exposure to smoke PM<sub>2.5</sub> is associated with acute cardiovascular outcomes, including reduced heart rate variability, increased blood pressure, unstable angina, heart attacks, strokes, out-of-hospital cardiac arrest, and death.<sup>(30)</sup> In contrast with respiratory outcomes, the effects of wildland fire smoke PM<sub>2.5</sub> on cardiovascular outcomes may be smaller than or more consistent with the effects of PM<sub>2.5</sub> from other sources.

There is also a rapidly growing body of evidence indicating that wildfire smoke PM<sub>2.5</sub> has negative effects beyond the respiratory and cardiovascular system, including cognitive function<sup>(34)</sup>, immune function<sup>(35)</sup>, kidney disease<sup>(36)</sup>, and blood sugar control among those who use insulin<sup>(37)</sup>. These types of effects associated with smoke exposure are consistent with the wider literature on the effects of PM<sub>2.5</sub> from other sources. Many acute respiratory, cardiovascular, and other health effects associated with short-term smoke exposures have now been reported within the first hours of increasing PM<sub>2.5</sub> concentrations,<sup>(34,37)</sup> highlighting the potential role of the indoor environment as a protective space.

Much less is currently known about the longer-term health effects associated with seasonal smoke exposures. It is plausible that extreme exposures during a severe wildfire season could cause health effects that do not resolve after the smoke has cleared, such as permanent detriments to lung function. It is also plausible that repeated seasonal exposures to wildland fire smoke can induce the onset of chronic diseases, consistent with the well-known effects of long-term exposure to urban air pollution from other sources. Indeed, two recent studies have shown an increased incidence of cancer after exposure to smoke from a coal mine fire (~~similar to wildland fire smoke~~<sup>(38)</sup>) and higher cancer rates in populations nearer to repeated wildfire activity.<sup>(39)</sup> While coal mine and wildland fire smoke may differ in composition and toxicology,

the PM<sub>2.5</sub> exposures for affected populations can be similar in magnitude and duration. Overall, the longer-term health effects associated with wildland fire smoke exposure are an active and growing area of epidemiologic research.<sup>(40)</sup>

#### 4.6 At-risk Populations

#### 4.7 Indoor Air Quality (IAQ)

Most people in high-income countries spend more than 90% of their time indoors,<sup>(47)</sup> where the built environment mediates their exposure to the outdoor air. Indoor air quality (IAQ) is a complex product of multiple factors, including outdoor air quality, indoor emissions, systems used for heating, ventilating, and air conditioning (HVAC), and other mechanisms such as deposition, chemical transformation, and air cleaning. The ASHRAE *Position Document on Indoor Air Quality* recognizes that IAQ affects human health, comfort, wellbeing, learning outcomes, and work performance.<sup>(54)</sup> It is the ASHRAE position that provision of acceptable IAQ is an essential building service and that all decisions about buildings and HVAC systems must consider the implications for IAQ. This guideline is written under the assumption ~~that IAQ is generally well-managed~~ the HVAC systems are well-maintained and working as designed in the buildings for which smoke readiness plans are being developed.

There are currently no federal government, ~~non-occupational~~ standards for PM<sub>2.5</sub> in indoor air environments. For informational purposes, US Environmental Protection Agency's (EPA's) primary (health-based) national ambient air quality standards (NAAQS) established under the Clean Air Act include both 24-hour and annual PM<sub>2.5</sub> standards which work together to protect the public from health effects associated with long- and short-term fine particle exposures. The annual PM<sub>2.5</sub> NAAQS is currently set at a level of 12.0 µg/m<sup>3</sup> (annual mean, averaged over 3 years) and the 24-hour PM<sub>2.5</sub> NAAQS is currently set at a level of 35 µg/m<sup>3</sup> (98 percentile, averaged over 3 years) at the time of publication of this guideline. The science upon which the NAAQS are based and the standards themselves are periodically reviewed and sometimes revised. Refer to the EPA website<sup>(55)</sup> for the most up-to-date standards. Refer to ASHRAE Standard 62.1-2022<sup>(56)</sup> Appendices E and N. (Consider occupant age, etc.), or standards published by other international environmental associations. The goal should be to keep indoor PM<sub>2.5</sub> concentrations as low as reasonably achievable (ALARA, see Background).

#### 4.8 Indoor Infiltration of Fine Particulate Matter (PM<sub>2.5</sub>) from Wildland Fire Smoke

#### 4.9 Indoor Fine Particulate Matter (PM<sub>2.5</sub>) Should be as Low as Reasonably Achievable (ALARA)

Very few studies have reported PM<sub>2.5</sub> infiltration coefficients of less than 20% during wildfire smoke episodes, even when significant efforts were made to limit smoke infiltration and clean the indoor air.<sup>(59)</sup> This may represent a practicable lower threshold when considering the *as low as reasonably achievable* (ALARA) approach to indoor PM<sub>2.5</sub> control when the outdoor air is affected by wildland fire smoke. Outdoor concentrations of PM<sub>2.5</sub> can vary widely during smoke episodes (Figure 1), with 24-hour measurements easily 300 µg/m<sup>3</sup> or higher in some areas. Such outdoor concentrations translate to indoor concentrations of 60 µg/m<sup>3</sup> or higher under the assumption of a 20% infiltration coefficient with no indoor PM<sub>2.5</sub> sources. This reduction in PM<sub>2.5</sub> constitutes *cleaner* indoor air compared with the outdoor environment, but not *clean* indoor air as it might be defined by existing guidelines and standards. For example, the EPA maintains a 24-hour average standard of less than 35 µg/m<sup>3</sup> of PM<sub>2.5</sub> in outdoor air on 98% or more of days, averaged over a three-year period. The equivalent Canadian standard was set at 28 µg/m<sup>3</sup> from 2015-2020 and 27 µg/m<sup>3</sup> from 2020-2025. This value may be further reduced in 2025, reflecting that there is no known threshold of PM<sub>2.5</sub> exposure without observable effects on population health. Recognizing this, the World Health Organization (WHO) recently revised its 24-hour PM<sub>2.5</sub> concentration guideline to 15 µg/m<sup>3</sup>.<sup>(68)</sup>



There are currently no regulated limits for indoor concentrations of PM<sub>2.5</sub> ~~in non-occupational settings~~. The ALARA principle is suggested referencing the most up to date sources of information such as but not limited to:

- ASHRAE 62.1-2022<sup>(56)</sup> appendices E and N
- EPA website<sup>(69)</sup>
- Websites for local health authorities which describe exposure considerations for PM<sub>2.5</sub>

It should be noted that the ALARA approach to indoor PM<sub>2.5</sub> may need to be balanced against other potential health hazards. For example, wildfires often occur during hot weather when indoor overheating can pose a significant health risk, especially for susceptible populations. In such cases, building operators may need to balance indoor PM<sub>2.5</sub> concentrations with occupant thermal safety. Similarly, wildfires may occur during periods of heightened risk for diseases caused by infectious aerosols, which may pose a significant health risk to some building occupants. In such cases, building operators may need to adjust the balance between outdoor air intake and recirculated indoor air. Overall, design engineers and building operators should be prepared to address multiple health hazards based on the characteristics of the individual building and the population it serves. Under ideal circumstances, buildings can help to protect their occupants from multiple and overlapping health threats.

To provide some further information on short-term health-based PM<sub>2.5</sub> concentrations, Table 1 includes the evidence-based smoke-adapted Air Quality Health Index (AQHI-Plus) developed in British Columbia and used in many parts of Canada.<sup>(129)</sup>

Table 1

<u>Range of 1-hour PM<sub>2.5</sub> concentrations</u>	<u>Risk Category</u>	<u>Health Message for People at Higher Risk</u>	<u>Health Message for the General Population</u>
<u>0-30 µg/m<sup>3</sup></u>	<u>Low</u>	<u>Enjoy your usual activities</u>	<u>Enjoy your usual activities</u>
<u>31-60 µg/m<sup>3</sup></u>	<u>Moderate</u>	<u>Consider reducing activities if you experience symptoms</u>	<u>Enjoy your usual activities unless you experience symptoms</u>
<u>61-100 µg/m<sup>3</sup></u>	<u>High</u>	<u>Reduce or reschedule strenuous activity</u>	<u>Consider reducing activities if you experience symptoms</u>
<u>100+ µg/m<sup>3</sup></u>	<u>Very High</u>	<u>Avoid strenuous activity</u>	<u>Reduce or reschedule strenuous activity, especially if you experience symptoms</u>

For any given building, the only way to understand the indoor infiltration of outdoor PM<sub>2.5</sub> is to measure indoor and outdoor concentrations simultaneously. There is now a proliferation of affordable sensor technology for measuring PM<sub>2.5</sub> with reasonable accuracy and precision, though data quality can vary within and between devices as described in Section 6.2.8. Many studies on smoke infiltration have leveraged these sensors to estimate infiltration coefficients and evaluate the effects of different interventions on those coefficients.<sup>(59,60,64)</sup> The best smoke readiness plans will include indoor and outdoor PM<sub>2.5</sub> measurements to ensure that indoor concentrations are truly ALARA for the building.

#### 4.10 Emerging Air Cleaning and Sensor Technologies

Many existing technologies can reduce the indoor impacts of outdoor wildland fire smoke, and this guideline has been developed to provide information on their use. At the same time, rapid technological changes are occurring in the field of IAQ that will complement this guideline in years to come. The global COVID-19 pandemic has led to unprecedented interest in IAQ improvements as an intervention to control the transmission of infectious airborne disease. This paradigm shift has been compared to much earlier efforts to provide sanitation, clean drinking water, and safe food<sup>(70)</sup>, and is likely to yield significant HVAC and air filtration innovations. At the same time, there are rapid advances in more reliable and low-cost sensors that can measure PM<sub>2.5</sub> and other constituents of wildland fire smoke.

Low-cost PM<sub>2.5</sub> sensors are increasing in availability, reliability, and durability so are highly recommended to be considered in new designs or added to existing buildings where practical. Strategic location in high use areas allows these sensors to act as one of the indicators of the effectiveness of any adaptations or design features of the HVAC system to reduce the impact of smoke on IAQ. They can also give information on when to trigger the Smoke Readiness Plan. In addition to measuring PM<sub>2.5</sub>, some instruments include additional sensors such as for CO, CO<sub>2</sub>, relative humidity (RH), or temperature.

**Note:** Devices intended for smoke detection from internal structural fires are not included in this section. Building fire suppression, detection, and control measures are not included in this guideline.

Given the breadth of air sensor technologies entering the market, the US EPA<sup>(71)</sup> has compiled information on the performance, operation, and best practices for effectively using these sensors, siting, and operation. The ideal application would be to monitor the space year-round and collect data on (IAQ) trends. These data can provide information on the “baseline” condition or the normal PM concentrations in the building. Because indoor activities can generate PM<sub>2.5</sub>, it is critical to place the sensor at its projected location prior to a smoke event to understand how the background concentrations change as a function of occupancy and activities in the building. These data can then be used to inform the Smoke Readiness Plan. For example, a certain PM concentration or deviation from typical background concentration could trigger specific actions such as increasing filtration or building pressurization setpoints.

Some sensors can send data to a cloud application which will increase resiliency in case the local storage is lost. These data can be made public or secure depending on the user’s settings.

These low-cost sensors should not be used to report PM<sub>2.5</sub> concentrations for any regulatory requirements. They are only to be used as an indicator to compare existing conditions to baseline conditions and/or to monitor the effectiveness of adaptations made to the HVAC system. PM<sub>2.5</sub> sensors may not give the exact concentration of PM<sub>2.5</sub> in the air unless they are calibrated or corrected for the specific conditions. Raw sensor data can still be useful for understanding air quality, such as by examining trends over time or comparing air quality in different locations (e.g., indoors vs. outdoors). ~~Avoid comparing very short term (e.g., 1 minute) sensor readings directly to health-based advisories such as the Air Quality Index (AQI) for PM<sub>2.5</sub> which use much longer averaging times (e.g., 24 hours).~~ Short-term (e.g., 1-minute) sensor readings should not be directly compared with health-based scales such as the Air Quality Index (AQI) for PM<sub>2.5</sub>, which uses a much longer averaging time (e.g., 24-hours). Whenever possible, it is best practice to set the averaging period for the sensor data to at least 15-minute intervals to provide the most meaningful estimates. There is more information on Indoor and Outdoor PM<sub>2.5</sub> monitoring in Section 6.2.8.

Another newer technology that could be used is Video Image Smoke and Fire Detection (VISD) which consists of a digital video camera coupled with a computer running video analytic software that can recognize smoke and fire in the image. VISD systems can monitor outside the building and look for visible indications of a fire or smoke to determine if the smoke is from outside the building or inside the building.

#### 4.11 Need for this Guideline

### 5 DESIGN AND COMMISSIONING

#### 5.1 Overview

#### 5.2 Definition of the Design Challenge Concepts

#### 5.3 Selection of Design Outdoor and Indoor Contaminant Levels

##### 5.3.1 Selection of an Outdoor Design Concentration of PM<sub>2.5</sub>

Select outdoor design concentration of PM<sub>2.5</sub> based on Informative Annex ~~B~~A.

##### 5.3.2 Selection of an Indoor Design Concentration of PM<sub>2.5</sub>

This guideline recommends an indoor design strategy of As Low as Reasonably Achievable (ALARA), with a target of 20% of the outdoor concentration. ~~See Section 4.9.~~ As shown in Table 1 in Section 4.9, there are various alternative health-based target concentrations to consider when determining the indoor design concentration; For general calculations, use 12 µg/m<sup>3</sup> or 15 µg/m<sup>3</sup>. Adjust this value based on the vulnerability of the intended occupancy and expected activity levels (e.g., usage of the space, occupant age, occupant susceptibility).

#### 5.4 Design Calculations and Processes

##### 5.4.1 Removal Need Calculation

The design calculations related to smoke protection (required flow rate and filtration efficiencies) are iterations of the conservation of mass of contaminants into the building that can be presented with the following equation for a given zone:

$$C_z = \frac{V_{if}C_o + V_{oz}(1 - E_f)C_o}{V_{oz} + FrRVrE_f}$$

Where

C<sub>z</sub> is indoor contaminant concentration in the zone (µg/m<sup>3</sup>)

V<sub>if</sub> is the infiltration flow rate to the building (m<sup>3</sup>/hr, cfm)

C<sub>o</sub> is the concentration of contaminants (PM<sub>2.5</sub>) in the outdoor air (µg/m<sup>3</sup>)

V<sub>oz</sub> is zone outdoor airflow (m<sup>3</sup>/hr, cfm)

E<sub>f</sub> is the filter removal efficiency (%)


Fr is the design flow reduction factor (=1 if the system is constant flow)

R is the recirculation flow factor (=1 if system is 100% recirculating)

V<sub>r</sub> is the recirculating or return airflow (m<sup>3</sup>/hr, cfm)

Notes: Zone air distribution effectiveness (E<sub>z</sub>) is assumed to be 1.0. See Figure 2 for schematic.

The above equation can be programmed into a spreadsheet so that designers can determine the impact on indoor contaminant concentration with varying parameters such as filter removal efficiency. Alternatively, designers can use an established IAQ and ventilation analysis computer program that performs mass balance analysis (e.g., public domain software CONTAM).

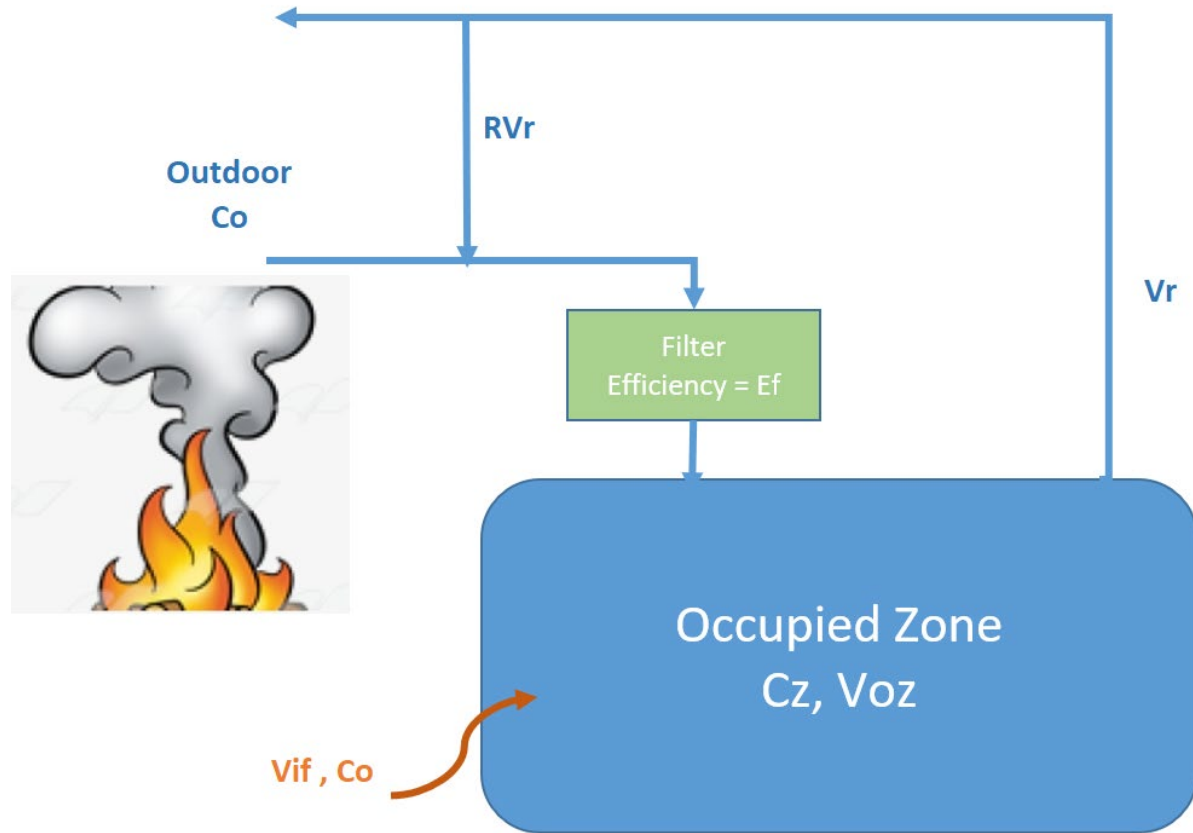

**Figure 2.** Schematic for single zone design equation

For more details on mass balance equations, including applications in different system configurations, see Appendix F of ASHRAE Standard 62.1-2022<sup>(56)</sup>

**Filter Removal Capabilities (Ef):** Table 42 indicates the  $PM_{2.5}$  removal efficiency ( $E_f$ ) for various MERV rated filters. This table represents a  $PM_{2.5}$  mass removal efficiency, which is not to be confused with *particle* removal efficiencies. The removal efficiencies listed in ASHRAE Standard 52.2-2017<sup>(72)</sup> cannot be directly used in this equation, since they are based on particle count and not mass.

**Table 42 -  $PM_{2.5}$  Mass Removal Efficiency ( $E_f$ ) for Various MERV Rated Filters.**

MERV	$PM_{2.5}$ Mass Removal Efficiency (3)
5	1.4%
6	7.2%
7 (#1)	7.6%
7 (#2)	24.1%
8	27.1%
10	31.5%
11	48.95% (1)
12 (#1)	27.2%
12(#2)	66.4%

<b>13</b>	<b>68.9% (2)</b>
<b>14</b>	<b>71.4%</b>
<b>16</b>	<b>96.3%</b>
<b>HEPA</b>	<b>99.7%</b>

Table Note 1: Removal efficiency for MERV-11 has been ~~extrapolated~~ interpolated from MERV-10 and MERV-12 (high value)

Table Note 2: Removal efficiency for MERV 13 has been ~~extrapolated~~ interpolated from MERV-12 (high value) and MERV-14

Table Note 3: As stated in the reference<sup>(73)</sup>, “Knowledge of MERV alone cannot always be used to predict UFP (Ultra Fine Particles) or PM<sub>2.5</sub> removal efficiency, as different makes and models can have very different UFP and PM<sub>2.5</sub> removal efficiencies depending on their actual size-resolved removal efficiencies.” For this reason, removal efficiencies have been reported for multiple filter manufacturers having the same MERV. Users are encouraged to obtain removal efficiency values from the manufacturer whose filters they intend to use.

*Example:*

*During a wildfire, the PM<sub>2.5</sub> outdoor concentrations reached 300 µg/m<sup>3</sup>. A building has an HVAC system with MERV-16 and the below characteristics. What will be the indoor PM<sub>2.5</sub> concentration?*

*HVAC System Characteristics*

	<i>SI Units</i>		<i>Imperial Units</i>	
<i>V<sub>oz</sub></i>	1000	<i>m<sup>3</sup>/h</i>	588	<i>Cfm</i>
<i>C<sub>o</sub></i>	300	<i>µg/m<sup>3</sup></i>	300	<i>µg/m<sup>3</sup></i>
<i>R</i>	0.8	<i>(unitless)</i>	0.8	<i>(unitless)</i>
<i>V<sub>r</sub></i>	5000	<i>m<sup>3</sup>/h</i>	2940	<i>Cfm</i>
<i>E<sub>f</sub></i>	96.3	<i>% removal</i>	96.3	<i>% removal</i>
<i>V<sub>i<sub>f</sub></sub></i>	500	<i>m<sup>3</sup>/h</i>	294	<i>Cfm</i>
<i>F<sub>r</sub></i>	0.6	<i>(unitless)</i>	0.6	<i>(unitless)</i>
<i>C<sub>z</sub></i>	48.7		48.7	

*Calculations and result (SI Units)*

$$C_z = (500 \times 300 + 1000 \times (1-0.9) \times 300) / (1000 + 0.6 \times 0.8 \times 5000 \times 0.9)$$

$$C_z = 48.6 \text{ µg/m}^3$$

*At this point, the designer can discuss with the owner if this concentration can be considered ALARA or can look at other measures such as increasing filtration, reducing infiltration, or increasing recirculation.*

*Note: it is not necessary to convert µg/m<sup>3</sup> to µg/ft<sup>3</sup> while using imperial units.*

#### **5.4.2 Estimation of infiltration (leakage)**

Use the ASHRAE Handbook Fundamentals Chapter 16<sup>(74)</sup> estimates of infiltration leakage per unit wall area for commercial construction. These are:

0.6 cfm/ft<sup>2</sup> (3000 cm<sup>3</sup>/s.m<sup>2</sup>) at 0.3 in. of water (75 Pascals) for leaky buildings

0.3 cfm/ft<sup>2</sup> (1500 cm<sup>3</sup>/s.m<sup>2</sup>) at 0.3 in. of water (75 Pascals) for average buildings

0.1 cfm/ft<sup>2</sup> (500 cm<sup>3</sup>/s.m<sup>2</sup>) at 0.3 in. of water (75) Pascals for tight buildings

Adjust these factors based on conditions at the site. See Section 4.8 of this document and Section 7 of the aforementioned handbook chapter for more details on infiltration values in commercial buildings.

#### **5.4.3 Filter loading calculation**

In order to evaluate loading of a filter, using the PM removal efficiency values from ASHRAE Standard 52.2-2017, one would need to know the particle size, distribution, and mass in the incoming air.

Several points should be considered:

- Particle number concentration is the total number of particles per unit volume of air (for example particles/cm<sup>3</sup>), whereas particle mass concentration is the total mass of particles per unit volume (for example µg/m<sup>3</sup>). Mass concentrations are typically dominated by larger particles.
- Any mass shown as PM<sub>1</sub> is a subset of both PM<sub>2.5</sub> and PM<sub>10</sub> concentrations. Likewise, any mass shown as PM<sub>2.5</sub> is a subset of PM<sub>10</sub>. Note: PM<sub>1</sub> is not an EPA defined value, but it is widely used to refer to particles less than or equal to 1 micron in aerodynamic diameter.
- Particles of different size ranges can have very different loading characteristics and methods.
- PM concentrations are generally reported as mass (e.g., µg/m<sup>3</sup>) or particle number (e.g., particles/m<sup>3</sup>).
- PM<sub>1</sub> particle number concentrations will typically be very high in high concentrations of smoke (i.e., large numbers, but very little mass). However, these particles can clog a filter very quickly if the media used in that filter does not load in depth allowing particles to penetrate deep into the media before capture. Most charged media products exemplify this expected result and can load very quickly with large concentrations of PM<sub>1</sub> particulate.

The chemistry and makeup of the particulate affects filter loading. If the particulate is dry and not “sticky” it will not readily agglomerate into larger particulate which will allow the filter to last longer in service. However, a slightly damp or “sticky” particulate is easier to catch, resulting in filters that reach final loading more quickly.

The protocol for loading a filter is defined in ASHRAE Standard 52.2-2017 resulting in a measurement of Dust Holding Capacity (DHC). The procedure involves loading the ASHRAE dust at a given rate into the filter while monitoring the resistance to airflow. When the final resistance is met, the test is stopped and DHC is calculated. The dust used is a mix of ISO fine, carbon black, and cotton linters. The ISO fine has a mean particle size of approximately 8 µm (PM<sub>10</sub> particles), but when combined with the “sticky” carbon black, the particles can agglomerate to much larger than 8 µm. This means ASHRAE Standard 52.2-2017 DHC is a mass loading from a particle size distribution that is very different from real life applications and especially under wildland fire smoke conditions. Thus, it is not unusual for a filter that holds 200 g of ASHRAE dust in the Standard 52.2-2017 test to hold several times more dust in “real life” to the same increase in resistance to airflow. However, if that same filter is subjected to a different outside air (OA) concentration/makeup, it might only hold 100 g until reaching the final resistance.

It is very difficult to predict how a filter will perform under wildland fire smoke conditions because of a number of variables involved in the problem including:

- accurate and complete testing information on the filters in the system
- accurate PM mass concentrations for particle size (PM 1, 2.5, and 10)
- knowledge of the particulate composition
- knowledge of the airflow rate
- knowledge of how the filter might load with different types of aerosol
- the amount of airflow bypassing the filter

If this information is not readily available, some assumptions can be made. Below is an example of how to calculate filter loading.

Example

*Assumptions:*

$PM_{1V} = 65\%$  of total mass

*Efficiency performance (Typical for a MERV 14 filter with no electrostatic charge)*

*$ePM_1 = 64\%$ ,  $ePM_{2.5} = 77\%$ ,  $ePM_{10} = 93\%$*

*Particulate is reasonably dry and not overly adhesive*

*Filter loads with depth loading and does not tend to mask off or face load*

*Filter will hold 2x the DHC of a ASHRAE 52.2 test*

*ASHRAE 52.2 DHC = 375g*

*Filter Flow rate 3400 m<sup>3</sup>/hr (2000 cfm)*

*No airflow bypassed around the filter*

*Filter operation 24 hr/day, 7 days/wk*

*Although filters capture all particle sizes which load the filters, during a wildfire event, filters will load with PM<sub>2.5</sub> particle much faster than other particle sizes as discussed in Section 4. Therefore, the calculations will focus only on PM<sub>2.5</sub> for filter loading during a wildfire event.*

*Mass capture rate ( $\mu\text{g}/\text{min}$ ) =  $[(ePM_1 * (PM_{10} * 200 \mu\text{g}/\text{m}^3) + (ePM_{2.5} * 150 \mu\text{g}/\text{m}^3) + (ePM_{10} * 200 \mu\text{g}/\text{m}^3)] * \text{Filter Flow in m}^3/\text{hr} / 60 \text{ min}/\text{hr}$*

*Mass capture rate =  $8,222 \text{ g}/\text{min} = 0.008222 \text{ g}/\text{min}$*

*Filter Life =  $0.008222 \text{ g}/\text{min} * (375 \text{ g} * 2) = 1,520 \text{ hrs or } 63 \text{ days}$   $375 * 2 / 0.008222 = 114,591 \text{ minutes} = 79 \text{ days}$*

Given the scarcity of information on actual filter mass removal efficiency, more research is encouraged.

## 5.5 Design Measures

### 5.5.1 Monitoring

#### 5.5.1.1 PM<sub>2.5</sub> Sensors and Monitors

During a smoke event, PM<sub>2.5</sub> should be directly monitored. If permanent PM<sub>2.5</sub> sensors are not installed, use handheld monitors. Select PM<sub>2.5</sub> monitors with data logging capabilities, where possible. Not all monitors include on-board data logging, but data logging is widely available. Non-event PM<sub>2.5</sub> concentrations will establish a baseline PM<sub>2.5</sub> which will be used during smoke events (see Section 6.4.3). The life-cycle costs of monitors needs to be taken into consideration. If staff time capacity allows, a handheld monitor may be sufficient to evaluate the efficacy of steps taken to keep out / filter out smoke, as long as repeat measurements with handheld sensors are possible over time and varying conditions (such as changes in outdoor air quality, occupancy, and occupant behaviors).

#### 5.5.1.2 Considerations for Sensor Placement

Place sensors in the following locations:

- Occupied areas of the building: Place sensors in key locations in a building, such as those with most common occupancy, highest occupancy, or occupied by at-risk populations (See Section 4.6).
- Entryways: Placing a sensor in a hallway and corridor near a building entrance will help assess the smoke ingress in the buildings.
- Outside: Place sensors at secure outdoor locations to capture outdoor air concentrations in proximity to the building.
- High physical activity level areas: like gyms for schools or hotels.
- Areas that are likely to be used as cleaner air rooms.

#### 5.5.1.3 Building Pressure Sensors



Use differential pressure sensors to measure the pressure difference between the building interior and the outdoor air. Install sensors in such a manner as to protect the equipment from weather events and wind effects. In systems where no BAS exists, the pressure difference should be monitored in the control room or mechanical room.

Due to the low differential pressure values sensed, differential pressure sensors can be significantly impacted by wind and stack pressures. Depending on the complexity and size of the building, more than one pressure measurement may be required both indoors and outdoors. Pressure sensors are subject to drift and require regular calibration. Care must be taken when selecting a pressure sensor and transducer for the application. To evaluate building pressurization performance, it is recommended to determine the actual building pressure and the actual airflow rates into and out of the building. Pressure sensors can be used in conjunction with airflow measuring stations that track airflows to enhance the accuracy of data. See Section 5.1.7.2.

#### **5.5.1.4 Building Smoke Detection Systems**

### **5.5.2 Building Controls**

#### **5.5.2.1 Building Control System**

Manual control methods may be a cost-effective solution where smoke events are infrequent. For buildings in high-risk areas, with BAS systems, add specific smoke-limiting logic for wildland fire events to automatically reduce ventilation (outdoor air) rates. Smoke-limiting controls can be fully automated, manual, or a combination of both.

Include the following control actions:

- a. ~~Ventilation shutdown or~~ Reduction of outdoor airflow:
  1. ~~Closure or~~ Reduction of airflow of outdoor air dampers for all systems equipped with automatic modulating control of the outdoor air dampers.
  2. ~~Shutdown or~~ Reduction of airflow from outdoor air fans, Heat Recovery Ventilators (HRVs) and Dedicated Outdoor Air Systems (DOAS), and other systems that provide outdoor air ventilation.
  3. Shutdown or reduction of airflow for all exhaust systems to maintain a positive building pressure. Hazardous exhaust like fume hood exhaust should be shut down only after discussion with the environmental health and safety professional.  
Note: any changes to outdoor airflow should be done in coordination with changes to exhaust airflows, so as not to create unfiltered infiltration. If ventilation airflow and exhaust is shut down completely, it may result in unintentional unfiltered infiltration due to wind and stack pressures. It is best to have the following changes automated to ensure repeatable changeover.
- b. Economizer and Demand Control Ventilation (DCV) shutdown:
  1. Disable economizer function such that systems operate at minimum outdoor airflow.
  2. Disable the DCV function such that systems operate at minimum outdoor airflow.
  3. ~~Use DCV associated CO<sub>2</sub> sensors to monitor IAQ. Reset the CO<sub>2</sub> setpoint up from its normal setting.~~
  4. Refer to Informative Appendix ~~DB~~ Managing Air-Side Economizer and Demand Control Ventilation for Smoke
- c. Increased indoor air filtration
  1. Where applicable, increase supply fan run times to include both occupied and unoccupied periods.

Note: some controls are setup to open outdoor air dampers when fan cycles or fan runs 100%. Verify control logic to ensure outdoor air is not brought in during unoccupied periods.

- d. Manual control of wildfire smoke control logic
  1. Provide a one-button initiation with a timer-based reset to automatically restore normal operation after a user-adjustable period.
  2. Provide a screen or user interface with all relevant control points required to control and monitor HVAC operation during smoke events.
- e. Automated control of wildfire smoke control logic
  1. Provide OA PM<sub>2.5</sub> sensor(s) with adjustable setpoints for initiation and return to normal operation.
  2. If a public PM<sub>2.5</sub> monitor is near the building, consider options for using these data to inform control inputs for initiation and return to normal operation.

### **5.5.2.2 Building Pressure**

Design ventilation systems for a net exfiltration, including under all dynamic reset conditions (See ASHRAE 62.1-2022, Section 5.17). It is recommended to operate a building at ~~+5 Pa~~ 0.02 to 0.07 in. w.c. (5 to 17 Pa) nominally as compared to the exterior of the building. Alternatively, balance the OA airflow to 10% greater than the exhaust airflow.

It is recommended to implement airflow measurement in the outdoor and exhaust air streams to provide enhanced monitoring and control. Tracking of airflows in and out of the building may help to maintain desired pressurization by controlling the pressurization flow.

### **5.5.2.3 Zonal Pressure Monitoring and Control**

Smoke migration inside the building can be mitigated by establishing interzonal pressure differences. Pressure is created by intentional movement of air and unintentional movement through enclosures. Minimizing leaks, understanding the amount of leakage, and controlling airflows into and out of spaces will result in desired pressurization. Airflow measurement can be used to monitor and control pressurization. If a zone is provided with pressure control capabilities (e.g., a matching pair of supply and return air boxes), these can be used to monitor and control the pressure to mitigate the infiltration of wildland fire smoke.

Zone pressure control strategies include the following:

1. Make vestibules, lobbies, or entry spaces negative with respect to the rest of the building and positive to the outside (cascading pressure).
2. Make the inner zones positive with respect to the entryways and circulation spaces.
3. Protect sensitive areas in a building with positively pressurized zones.

## **5.5.3 Envelope Tightening**

### **5.5.3.1 Building Egress and Entrance Points**

### **5.5.3.2 Other Tightness Measures**

## **5.5.4 Filters**

### **5.5.4.1 Filters in New Construction**

### **5.5.4.2 Filters in Retrofits**

Designers are encouraged to use the removal need calculations outlined in Section 5.4.1 to determine the appropriate filter MERV rating. However, if calculations cannot be performed, the minimum filter efficiency for removing PM generated by a wildland fire event is MERV 13 where rated in accordance with ASHRAE Standard 52.2-2017, or not less than ePM1-50% where rated in accordance with ISO 16890. The AHU/HVAC system in retrofits of existing buildings should be modified as practicable to accept a minimum of MERV 13 or ePM1-50% filters. A low-pressure HEPA filter should be considered if the building occupants have respiratory or heart disease conditions, or if the building experiences frequent wildland fire episodes.

Before upgrading the filter efficiency, the existing filter housing should be checked to verify it can accept a MERV 13 or ePM1-50% filter, and the pressure drop rating for the new filter should not exceed the AHU design pressure drop. If a suitable MERV 13 or ePM1-50% filter cannot be matched to the system, consider the use of the highest MERV rating that the system can accept. Lower airflow is expected in these situations, but if the system has some reserve capacity, there may be minimal impact on the system's total air flow. If total airflow is reduced below the designed specification, the occupancy of the impacted areas should be reviewed.

Filters with a MERV rating lower than ~~14~~ are not effective to remove PM<sub>2.5</sub>. In these cases, increasing interior filtration and circulation systems is recommended. See Section 5.5.5.

#### **5.5.4.3 Fan Sizing for Filter Loading**

When designing a new fan system, the following measures are recommended to account for MERV 13 or ePM1-50% filters:

- Supply fans should be sized to ensure they can provide the design airflow through a loaded MERV 13 filter.
- The fans' operating point at the design airflow and the required total static pressure plus the pressure drop from a dirty MERV 13 filter should not be in the fan surge or 'do not select' zone.
- The fan motor ~~horsepower~~ rating should be selected to handle the ~~brake horsepower~~ fan shaft power increase due to the added pressure drop from a dirty MERV 13 filter.
- The fans' motor starters or variable frequency drives (VFDs) should be selected so their rated current (amperage) is not below the required current (amperage) draw to handle the added pressure drop from a dirty MERV 13 filter at design airflow.
- With oversized fans and motors to account for the pressure drop of dirty MERV 13 filters, the designers should check if during normal operation the fans can still satisfactorily throttle down to the design minimum airflow (or as required by the energy code).

#### **5.5.4.4 All-water and Variable Refrigerant Flow (VRF) Systems**

#### **5.5.5 Portable Air Cleaners**

PACs are most effective when airflow is unrestricted by furniture or architectural features. From a design perspective, spaces that may use PACs should be identified early in the design discussions and include the following aspects:

- Power outlets – ensure sufficient, ideally dedicated, power outlets for PACs. Consider emergency power outlets for special building occupancy types (see Section 5.7).

- No obstruction – interior layout of the space should allow for PAC placement such that desks or other furniture will not obstruct airflow from a PAC.
- Supply chain or storage – A source of PACs should be identified. If PACs will be purchased and stored on site, storage space should be planned.
  - a. Replacement filters for the PACs should be kept on hand as well.

See Section 6.2.2.3 for additional information.

## **5.5.6 Hybrid/Naturally Ventilated Buildings**

### **5.6 Commissioning**

#### **5.6.1 Filter Challenge Testing (system filters)**

At present, there are no established industry standards for on-site testing of particle removal efficiency in permanently installed HVAC equipment. There are established laboratory testing methods for air filters. There are also methods for testing of clean room filter panels. However, for the most common systems, there are no established methods for demonstrating filter/system effectiveness. ASHRAE Standard 241-2023<sup>(86)</sup> Appendix C provides an in-place test method for determining the impacts of physical removal mechanisms (ventilation, filtration, deposition) on particles in a space up to 900 ft<sup>2</sup>. The authors of this guideline recognize this issue as a need for future development. Particle removal effectiveness of installed filters as part of an HVAC system is a vital component of wildland fire management design, which should be supported by a field validation protocol.

#### **5.6.2 Envelope Commissioning**

### **5.7 Special Building Occupancy Types**

#### **5.7.1 Healthcare Facilities**

The following special points should be considered when analyzing wildland fire smoke mitigation measures for healthcare facilities:

- Hospitals may contain clean rooms (e.g., compounding pharmacies) or other spaces with enhanced filtration and airflows (e.g., operating and invasive procedure rooms, protective environments). Smoke could rapidly load the filters in these areas.
- Most hospitals are constructed with two-pass filtration, often containing a MERV 14 or MERV 16 as the final filter. Additionally, minimum ventilation rates in hospitals are high. As such, the removal capabilities of hospital HVAC systems are much higher than other building types. For smaller or less severe fire events, improvements will be unnecessary.
- Building and space level pressurization. Most, if not all, building codes require some spaces in healthcare facilities to maintain a certain pressure (positive or negative) with respect to adjoining spaces in order to help with infection control. Any modification to the buildings' OA or even the supply air to certain areas inside such healthcare facilities should be carefully reviewed with the facility infection control team. It is also recommended to include the impact of such changes in the Infection Control Risk Assessment (ICRA) report. Particular attention should be paid to the following areas:
  - Operating room suites, a location with persons undergoing invasive procedures, are much more susceptible to infectious agents.

- Nurseries and pediatric care, an area occupied by the most at-risk patients, have newborns and infants who have not had the opportunity to develop the body's natural protection systems with regard to airborne contaminants. Many newborns spend their first days in an incubator that includes the highest level of contaminant protection, a HEPA filter.
- Patient waiting and out-patient care areas, the typical first stop of those suffering from a variety of illnesses. These areas generally have the largest number of doors to the outside and hence are the most prone to smoke intrusion.
- Patients in hematology/oncology units who may have compromised immune systems.
- Continuous operation under even severe wildland fire smoke. Hospital emergency departments near the fire must remain operational to treat firefighters and affected community residents. To deal with smoke risks, hospitals in fire-prone areas may be able to isolate emergency department ventilation systems and enable recirculated air during emergency conditions. In addition, portable air scrubbers or HEPA filters can be placed in various units to capture smoke, fumes, and airborne particles if outdoor ventilation systems must be shut down.
- Non-HVAC filters. In addition to HVAC equipment, healthcare facilities are encouraged to have adequate filtration on all outdoor air intakes to any equipment during wildland fires. A typical example is to make sure there is a HEPA filter on the medical air compressor intake and make sure it is changed frequently during a wildland fire event. Also, filters installed on medical equipment (e.g., the filter on a NICU incubator) may load up faster during a wildland fire event even if the equipment is indoors. The healthcare facility is encouraged to have a full inventory of filters in the facility (for HVAC and non-HVAC equipment) with a spare stock before the wildfire season starts. Continuous checking of the cleanliness of all filters on all equipment should be added to any smoke mitigation plan.
- 100% OA systems. Some hospitals are designed with 100% OA systems with which it will be challenging to mitigate the intake of large quantities of wildland fire smoke. The design team should consider adding bypass dampers on the HVAC system to allow the system to temporarily recirculate some air as long as infection control is not compromised.
- The deployment of PACs in healthcare facilities should be reviewed with the facility infection control team. Given the large areas in hospitals, the airflow from PACs may become large enough to compromise infection control. Placement of the unit(s) is critical.
- Hospitals should also pay special attention to the entryways, ambulance bays, and loading docks (See Section 6.2.7) because these areas may be large sources for smoke infiltration.<sup>(60)</sup>

### 5.7.2 Prison/Detention Centers

The following special points should be considered when analyzing wildland fire smoke mitigation measures for prisons/detention centers:

- Inability of residents to leave or evacuate at will. Prisons and detention centers are generally very difficult to evacuate and hence the smoke mitigation plan should consider a “shelter in place” strategy by ~~considering~~ using higher efficiency filters, PACs, and pressure cascading to mitigate smoke infiltration as much as possible.

### 5.7.3 Applications

Table 23 includes a matrix representing a high-level assessment of the ease of incorporating the specific measures included in this section for various types of HVAC systems using a score from 1 to 3 as follows:

1. Easy to implement

2. Moderately difficult to implement
3. Hard to implement

**Table 23 - Application of measures to mitigate wildfire smoke**

Measure \ System	Large chilled water AHUs with supply VAVs	Large chilled water AHUs with supply VAV <sup>2</sup> s and return airflow control	Large rooftop package units ( <u>more than 5 tons</u> )	Small roof top packed units (5 tons and smaller)	Radiant Systems with DOAS	Chilled Beams with DOAS	Ducted VRF with DOAS	Ductless VRF with DOAS
Add PM <sub>2.5</sub> sensors	1	1	1	1	1	1	1	1
Add building pressure sensors	1	1	1	1	1	1	1	1
Reduce / Shut-down OA	1	1	1	2	2	2	2	2
Disable economizers and/or DCV	1	1	2	2	N/A	N/A	N/A	N/A
Maintain positive pressure between building and outside	1	1	1	1	1	1	1	1
Maintain positive pressure across zones inside building	3	1	3	3	3	3	3	3
Vestibules/Entryways	2	2	2	2	2	2	2	2
Add air curtains	1	1	1	1	1	1	1	1
Tighten duct and dampers after leak test	1	1	1	2	1	1	1	2
MERV 13 filters on recirculating and OA air	1	1	1	2	3	3	2	3
MERV 13 filters on OA air only	1	1	1	2	2	2	2	2
Fan sizing for filter loading	1	1	1	3	2	2	2	2
Add Portable Air Cleaners (PACs)	1	1	1	1	1	1	1	1

## 5.8 Communication of the Smoke-Readiness Plan to the Design and Operation Team

### 6 OPERATION DURING A WILDLAND FIRE EVENT

Facility managers should prepare for wildland fire smoke events in advance. It is important to realize that this planning and testing process will take considerable time and effort.

Any HVAC maintenance problems should be identified well in advance of wildfire season. Timely inspections will ensure that repairs can be made, and the system can be tested in the operating mode that will be implemented under smoke conditions.

ANSI/ASHRAE/ACCA Standard 180 Standard Practice for Inspection and Maintenance of Commercial Building HVAC Systems<sup>(91)</sup> has recommended procedures. ANSI/ASHRAE Standard 62.1 Ventilation and Acceptable Indoor Air Quality<sup>(56)</sup> Section 8 Operations and Maintenance has ventilation specific checklists and procedures.

This section provides guidance on:

- Elements to include in a Smoke Readiness Plan,
- Preparation and testing for smoke-ready operations,
- Operations and monitoring during a smoke event, and
- Returning to normal operations.

#### 6.1 Developing a Smoke Readiness Plan

A Smoke Readiness Plan documents the preparatory steps and mitigation strategies that the facility will use before, during, and after a wildland fire smoke event to maintain indoor air quality (IAQ). Sections 6.2, 6.3, 6.4, and 6.5 provide guidance on elements to consider in a Smoke Readiness Plan. Each building and plan are specific to the type of building, the HVAC system, and the expected environmental condition.

The design and commissioning documentation discussed in Section 5 should include specific design elements for a wildland fire smoke event. This information should inform the Smoke Readiness Plan. The Smoke Readiness Plan will describe which control measures will be used and how they will be initiated.

In addition to the substantive actions, the development of the plan should also include:

- Specific building design elements for controlling smoke, when available;
- Roles and responsibilities of staff responsible for implementing the plan;
- Expected costs associated with implementing the plan so that any necessary approvals can be obtained beforehand; and
- Updates as lessons are learned with each smoke event.

**Table 34** Illustrates major elements that should be considered for inclusion in a Smoke Readiness Plan and indicates the sections and checklists or tables that can assist in the planning process.

**Table 34 - Elements to Consider in the Smoke-Readiness Plan**

Preparing for Wildland Fire Smoke		
Example Questions to Address in Planning Phase	Guidance in this Document	
What are any specific building design elements for controlling smoke?	Sec 5.5 Design Measures Sec. 5.9 Communication of the Smoke Readiness Plan to the Design and Operation Team	
Is the HVAC system in need of maintenance and repair?	Sec. 6.2.1 Mechanical Ventilation and Checklist 1	
Are the needed supplies on hand (including HVAC filters, personal protective equipment, portable air cleaners, etc.)? Where are they stored?	Sec. 6.2.2 Air Cleaning Sec. 6.2.7 Administrative Controls	
Do building automation systems display the controls and settings that will need to be adjusted for smoke?	Sec 5.5.1 Monitoring Sec 5.5.2 Building 24controls Sec. 6.2.3 Building Automation System,	
<u>Is an indicator such as a magnehelic gauge or other sensor/procedure in place to identify when filter changes are needed?</u>	<u>Sec. 5.5.1.3 Building Pressure Sensors</u>	
Have the gaps in the building envelope been sealed?	Sec 5.5.3 Envelope Tightening Sec. 6.2.4 Building Envelope	
Do dedicated cleaner air spaces with portable air cleaners need to be set up?	Sec. 6.2.2 Air Cleaning Sec. 6.2.5 Dedicated Cleaner Air Spaces	
Are there concerns about maintaining space conditioning or reducing odors?	Sec. 6.2.6 Maintaining Space Conditioning and Reducing Odors	
Can indoor sources of air pollutants be identified and either reduced or eliminated?	Sec. 6.2.7 Administrative Controls	
Can smoke entry into the building be reduced by limiting use of certain entrances/exits?	Sec. 6.2.7 Administrative Controls	
Are indoor PM <sub>2.5</sub> monitors available? What are the baseline PM <sub>2.5</sub> concentrations?	Sec 5.5.1 Monitoring Sec 6.2.8 Indoor and Outdoor PM <sub>2.5</sub> Monitoring	
Are there special circumstances to address?	Sec. 6.2.9 Special Considerations for Healthcare Facilities, Schools, and Other Institutions	
What are the criteria for implementing the plan <u>and returning to normal operation</u> ?	Sec. 6.4.1 When to Implement the Smoke-Readiness Plan Sec. 6.5 Returning to Normal Operations	
Operational Testing	Implementing the Plan	Returning to Normal Operations
Test any specific building smoke control measures	Take the steps in the plan. Sec 6.4.2, Checklist 2	Return HVAC to normal settings. Sec. 6.5, Checklist 3
Test outside air damper settings that may be used to limit smoke entry. Be sure that positive building pressure is maintained. Sec. 6.2.1	Take the steps in the plan. Sec 6.4.2, Checklist 2	Return HVAC to normal settings. Sec. 6.5, Checklist 3
Check that indoor PM <sub>2.5</sub> monitors are working Sec. 6.2.8	Check indoor PM <sub>2.5</sub> monitors to see if mitigation measures are working, make any adjustments.	Clean indoor surfaces. Sec. 6.2.7



	Sec 6.4.3	
--	-----------	--

Advanced planning for smoke events is critical for building operators, and some measures can be challenging or impossible to implement once smoke has already arrived. Many aspects of planning and implementation are complex. Professionals who can assist developing and implementing the plan include:

- HVAC service contractor
- Test, Adjust, and Balance (TAB) contractor
- Commissioning provider
- Controls contractor
- HVAC design professional

The building operator needs a complete understanding of the existing equipment and operating conditions. Resources for that understanding include:

- Observations
- Controls diagram
- Record drawings
- TAB Report
- Commissioning report



**Figure 3. Picture of a warped damper blade unable to close.**

Use **Checklist 1** to determine if the HVAC system is ready for smoke. For all components of the Smoke Readiness Plan, maintaining good documentation is recommended, as the personnel who carry out the actions to manage a smoke event may not be the same people who recommission the system afterwards. Detailed notes, checklists, and photos documenting any changes to the HVAC system(s) are essential. The Smoke Readiness Plan should also include documentation of original control settings (e.g., switches, damper positions, and control relays). Use notations, permanent markers on equipment, and photos to create a comprehensive record of normal operating conditions. **Table 45** shows an example of how these settings can be captured.

**Checklist 1: Determine if the HVAC System is Ready for Smoke**

1. Review and check the building's smoke control design features.
2. Do the outdoor air dampers function correctly? **Figure 3** shows a picture of a warped damper blade unable to close.
3. Are the damper blades, linkage, and edge seals in good condition?
4. Does the building have a commercial thermostat or control system that allows the outdoor air dampers to remain closed when the system is set for an unoccupied state?
5. Are there record drawings, blower door tests, commissioning reports, equipment installation, and service manuals or other information available?
6. Does the outdoor air economizer work correctly?
7. Can the minimum damper setpoint be changed and the economizer function be temporarily shut off? How is this accomplished for each air handler?
8. Is it possible to disable or reduce the relief fan airflow?

9. Does the demand control ventilation system work correctly?
10. Can the unit use MERV 13 or higher filters? If the system cannot use MERV 13, use the highest MERV-rated filter possible. There are alternative filtration technologies that allow filtration at a range of pressure drops. See the Upgrading and Improving Filtration section of the ASHRAE Epidemic Task Force Building Readiness guide for more information.
11. Has an HVAC or TAB technician evaluated whether installing MERV 13 filters will reduce airflow to an unsafe level? System characteristics such as the duct configuration and dirt on air coils can also affect airflow.
12. Are all filters properly seated and edges sealed? Air leakage around the filters will greatly reduce their ability to clean the air. **Figure 4** shows a filter that is not seated correctly.
13. Have the filter and fan access doors been checked to confirm that they are fastened and sealed?
14. Where are the exhaust fans and how are they controlled?
15. Which exhaust fans are critical for safety? Examples may include exhaust fans serving isolation rooms, commercial kitchen hoods (if cooking is occurring), and locations where hazardous materials are handled (e.g., laboratories).
16. Where are the locations of exhaust grilles? Can they be partially blocked to reduce the amount of filtered outdoor airflow?
17. If the building has more than one air handler or rooftop AC unit, can some of them be set to recirculation and a small number used to provide filtered outdoor air?
18. Does the building have an air conditioning system or portable cooling units to prevent heat-related illness?



**Figure 4. Picture of a filter that is not seated correctly.**

**Table 45 - Example of how to capture operational settings in normal operations and Smoke-Ready mode.**

Setting	Value under Normal Operations	Value during Smoke-Ready Mode	Notes (such as date changed)
Outside air damper setting			
Operating time schedule of HVAC system			
Filter size			
Quantity needed per filter replacement			
MERV rating of main HVAC unit filters			
Critical breaker and switch positions and locations			

## 6.2 Preparing for Smoke Events

### 6.2.1 Mechanical Ventilation

During wildland fire smoke events, the operational challenge will be to limit the amount of outdoor air brought into the building, consistent with maintaining positive building pressure relative to the outdoors, while maintaining adequate airflows that are protective of human health and equipment operation. Reduced ventilation may be acceptable for short periods to protect at-risk populations. Prior to wildfire season, determine an outdoor air intake level that controls odors, temperature, CO<sub>2</sub> concentrations, and maintains a positive building pressure consistent with building and HVAC system design during smoke-ready periods. Airflow measurements are a method that may be used to validate proper ventilation and can be used in smoke control mode to adjust outdoor airflow and exhaust while maintaining building pressurization. The ability to disable and re-enable economizer and demand control ventilation (DCV) operation should be given high priority when developing a Smoke Readiness Plan (see Informative Appendix C). It is critical to repair broken dampers, actuators, and HVAC controls prior to wildfire season.

Finding effective work arounds to temporarily limit the amount of outdoor air and wildland fire smoke brought into the building may be difficult. Plan and investigate what actions are needed to limit economizer and DCV operation. This may include adding switches, control relays or implementing manual control for outdoor air damper to set the position for the minimum air required for positive building pressure. This will require testing, as outlined in Section 6.3.

Installing filters on the outdoor air intake is recommended (see Section 6.2.2.2).


Inspect energy recovery ventilators (ERVs) and evaluate how the projected changes to outside and ventilation airflows will impact building pressure.

### 6.2.2 Air Cleaning

Air cleaning to reduce PM<sub>2.5</sub> concentrations from wildland fire smoke in indoor air can be achieved through filtering recirculating air, incoming outdoor air, and using a portable air cleaner (PAC) in the room(s). Plan ahead, high efficiency filters frequently sell out during smoke events. The Smoke Readiness Plan should identify the size and number of replacement filters to have on hand and specify the storage location for these supplies. Section 5.4.3 details a loading estimation calculation that could be used to determine the lifespan of a particular filter to assist in supply and stock on hand decisions.

### 6.2.2.1 Cleaning Recirculating Air

HVAC system recirculation filter(s) can be upgraded. The particle removal calculation outlined in Section 5.4.1 is a method to select the appropriate filter MERV rating. If calculations cannot be performed, MERV 13 (or equivalent performance for PM<sub>2.5</sub> in other rating systems) filters are recommended. Before using filters with a higher MERV rating, check that the system can accommodate them (See Table 56 for more information). Wildland fire smoke can quickly load filters (see **Figure 5**) and they may need to be changed as frequently as daily during smoke events. Note, if the wildland fire smoke event lasts for multiple days, the recirculation system should be operated continuously for air cleaning.

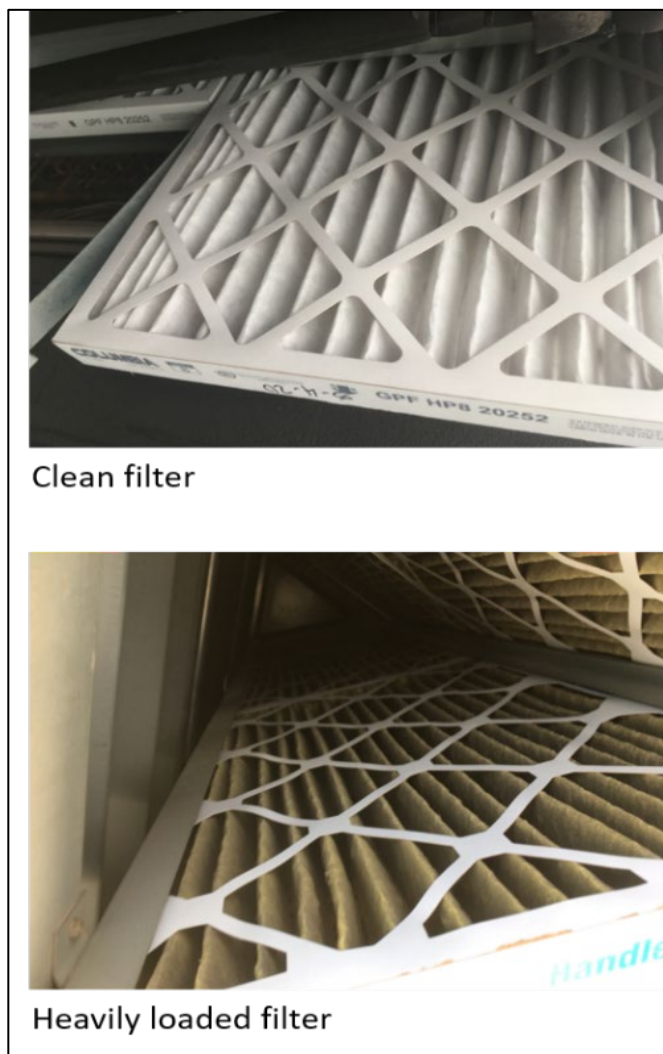

**Figure 5. Comparison of a clean filter to a filter heavily loaded with wildfire smoke.**

When upgrading to higher-efficiency filters, there is concern the additional pressure drop will stress or harm the fan motor or other HVAC components. The airflow must be adequate to transfer heat in and out of the conditioned space within the design parameters of the equipment. Clean heat transfer coils and fan blades may provide additional capacity for air filtration. ~~Note that as the As filters load with smoke particles,~~ airflow will be reduced. Most systems are not able to operate safely and effectively below 70-80% of nominal airflow.

Monitoring the fan motor operation and checking temperatures at a few key locations will provide information to determine safe operation or the inability to use higher MERV rated filters. To gain an understanding of important benchmark temperatures and pressures, reference the manufacturer's literature. ~~Brief guidance related to upgrading filters is provided in **Table 5** for various HVAC components. For a more detailed discussion about evaluating the maximum MERV rating that the building HVAC system can accommodate,~~ See the Upgrading and Improving Filtration section of the ASHRAE Epidemic Task Force's Building Readiness for additional guidance .<sup>(92)</sup>

**Table 56 – Brief Guidance for Upgrading to Higher-Efficiency Filters**

Centrifugal fan surge

Surge is a natural phenomenon that occurs when the maximum head pressure and minimum flow is reached by a centrifugal fan. When the head pressure is greater than the outlet pressure, the air will reverse and try to flow back into the fan inlet. This unstable pressure cycling creates pulsing noises and vibrations known as surge. If surge is created by the addition of MERV 13 filters, the fan design has been exceeded. Another method should be used to clean the indoor air. Consult with an HVAC expert for options.

ECM fans

Electronically commutated motors (ECM) ~~for fans are can optionally be electronically speed-controlled~~ for constant torque. If these motors are used for fans with forward curved impellers, they can ~~will~~ increase in speed and then power usage to maintain a constant airflow. Up to a point, this is a good thing. These motors should be monitored for amperage to verify they do not overload when upgraded filters are installed and whenever the filter loading is checked. Monitor the amperage until there is adequate history that demonstrates the motors do not exceed their rated electrical capacity (full load amperage) during a wildland fire smoke event. As the static pressure increases, constant torque ECM fans may become noisy.

AC induction motors with VFD controlled fans

Fan motors on a variable frequency drive (VFD), also known as a variable speed drive, typically are controlled to maintain a duct static pressure setpoint. These motors need to be monitored as well for overloading. Check the drive parameters to verify they match the motor name plate information. Most VFDs will provide adequate motor protection if these parameters are correct. If the drive display shows the motor operating continuously at 100% speed, the unit or filters may need additional corrective actions. When increasing the fan speed, do not exceed the maximum tip speed or the maximum motor power.

Other AC induction motors

~~Constant speed~~ Uncontrolled induction motors typically used with forward curved fans will decrease the power usage as the filters load with dirt/smoke and the airflow decreases. These fan-motor-combinations ~~motors~~ will not overload with a greater pressure drop, but lower airflow may harm other parts of the system. ~~When increasing the fan speed, do not exceed the maximum tip speed or the maximum motor power.~~

Direct expansion cooling

Low airflow can lead to loss of cooling and compressor failure. Air temperature measurements are a simple way to verify safe operation. The manufacturer's literature or the startup records will have a recommended air temperature difference ( $\Delta T$ ) across the evaporator coil. The rule of thumb is 20°F (11°C)  $\Delta T$  with a minimum discharge temperature of 55°F (13°C) measured after 20 minutes of continuous running. If the discharge temperature is below 55°F (<13°C), visually check for frost or ice on the evaporator coil. Frost is an indication that there is inadequate airflow and the filters, or the level of dust loading, may have become too restrictive. Some fan motors may have the ability to increase speed by changing electrical connections or VFD settings. After adjusting the fan speed, re-check the temperatures.

As the filters load with dust/smoke, the airflow may fall below the acceptable rate. Piston (reciprocating) compressors are most likely to be damaged by low airflow; scroll compressors are a little more resilient. Units with compressor staging may require additional observation and testing. It is up to the operator to determine that conditions for safe operation are in place.

Heat pumps

While cooling, follow the guidelines above. While heating, low airflow may cause the unit to shut down when the high-pressure safety trips. Review the manufacturer's instructions to determine the appropriate limits for the maximum discharge temperature and  $\Delta T$ .

Electric resistance heating

Electric heating elements must have sufficient airflow to operate. Review the manufacturer's instructions to determine the appropriate discharge temperature limit.

Combustion appliances

Roof top units and air handlers with natural gas or propane heat need adequate supply airflow for heat transfer and to prevent damage to the heat exchanger. The unit label or manufacturer's literature will list a maximum discharge air temperature and a range of temperature differences that indicate acceptable operation. Rule of thumb is 160°F (71°C) maximum discharge temperature and 40 to 60°F  $\Delta T$  (22 to 33°C) across the heat exchanger. Direct-fired units and oil-fired units have similar parameters. Always use the manufacturer's

### 6.2.2.2 Cleaning Outdoor Air

Providing supplemental filtration of outdoor air entering the HVAC system is recommended. A MERV 13 or higher filter temporarily installed on the outdoor air intakes will capture a large fraction of the PM<sub>2.5</sub>. ~~Figure 6 shows a MERV 13 filter temporarily installed on an intake air vent.~~ Prior to wildfire season, inspect the air intake and make a list of filters (including the specific quantity and size of the filters), tape, temporary ducting materials, and other items needed to mount filters tightly to the air intake. Consider having a contractor install permanent filter racks on the outdoor air intake.

#### ~~Figures 6-a and 6-b. Picture of a MERV 13 filter installed on an outdoor air intake as supplemental filtration~~

To help assess the useful life of these supplemental filters, add a port or pressure gauge to measure the filter pressure drop on at least one air handling unit (AHU). A rule of thumb is to replace the filter when pressure drop becomes twice the initial pressure drop. When outdoor PM<sub>2.5</sub> concentrations are high, supplemental filters may need to be changed daily.

### 6.2.2.3 Use Portable Air Cleaners to filter the air in the room(s)

Portable air cleaners (PACs), also known as air purifiers, can be used in appropriate spaces where cleaning the recirculating and incoming air is insufficient. PACs and replacement filters should be purchased in advance of the fire season. They may quickly become unavailable during wildfire events.

Portable air cleaners, including DIY air cleaners, are only part of a comprehensive IAQ strategy. They do not replace the need for ventilation and should be used in conjunction with other appropriate health measures.<sup>(93)</sup>

#### 6.2.2.3.1 Selection of Portable Air Cleaners

PACs utilize different technologies to clean the air by filtering particles, reducing VOCs, or reducing micro-biological contaminants. Select a PAC that is matched to the target contaminant(s). For smoke from wildland fires, PACs should be selected primarily to reduce particles. Units with activated carbon filtration can reduce some VOCs. Important tips for selecting a PAC include (Adapted from [NIEHS Selection and Use of Portable Air Cleaners](#)<sup>(94)</sup>)

- Size – choose the correct size of air cleaner for the room where it will be used
- Noise – consider the noise rating. Air cleaners are usually most effective when run at high speed. Will the noise be disruptive in the room?
- Filter – select a unit with a HEPA or equivalent filter that will remove sub-micron particles
- Location - Place the air cleaner where it will be able to filter as much of the air in the room, as possible (not, for example, next to the wall or blocked by furniture)
- ~~Avoid~~ avoid ozone generators or other disinfection features which may pose a health hazard are not recommended.

Some air cleaning devices include features which can produce ozone intentionally or as an unintentional by-product and hence are not recommended and may be prohibited in some jurisdictions. Air cleaning devices and systems that incorporate ultraviolet light or the creation of charged particles, ions, or free radicals should comply with Section 5.7.9 of ASHRAE 62.1-2022<sup>(56)</sup>.

It is important to have a correctly sized air cleaner(s) for the space. PACs should be used in closed rooms to maximize effectiveness. PACs tested to the Association of Home Appliance Manufacturers (AHAM) standard are designed for room use in residential settings.



The AHAM smoke clean air delivery rate (CADR) is the rating for 0.09 to 1.0-micron particles and represents the amount of clean air delivered on the high-speed setting. AHAM tests and certifies CADRs of PACs following the ANSI/AHAM AC-1-2020 standard.<sup>(95)</sup> For wildland fire smoke, AHAM advises selecting an air cleaner with a smoke CADR equal to the size of the room in square feet, e.g., for a room of 120 ft<sup>2</sup>, the CADR should be 120.<sup>(96)</sup> EPA and National Institute of Environmental Health Sciences (NIEHS) also provide additional information on the selection, use, (including room configuration), and maintenance of PACs.<sup>(82-84)</sup>

Another way to evaluate air cleaning is to calculate the equivalent amount of PAC air changes per hour (eACH) that are necessary to achieve the same reduction of pollutants as would be achieved with a MERV 13 filtration. This calculation can be done with a combination of air cleaning options. ASHRAE has developed a calculator to help with this method<sup>(100)</sup>, as well as, AHAM has published a white paper on eACH for PACs.<sup>(101)</sup> Carefully read all information, examples, and instructions provided with the calculator prior to evaluation.

PACs tested to the AHAM standard have a maximum smoke CADR of 600. Multiple devices may be needed for larger rooms and those that have a ceiling height greater than 8 feet. Alternatively, commercial air scrubbers, which are similar to PACs, are specifically designed for use in larger spaces. They can be quite large and have high airflows and may be noisy. As with other equipment and supplies, larger air cleaners and replacement filters should be acquired by purchase or rental well in advance of the fire season.

There appears to be no standard method of testing the performance of commercial air scrubbers, and manufacturer performance data may not be readily available. Device specifications such as airflow, filtration efficiency, or a CADR are useful for selecting an appropriate device. Use caution when comparing the CADR to commercial air cleaners tested to the AHAM standard as the test methods may not be directly comparable. Many commercial air scrubbers can also be used as negative air machines by connecting a hose to the device that exhausts to the outdoors. Do not use this configuration during a wildland fire smoke event as it could draw in smoke via infiltration.

#### **6.2.2.3.2 Do-It-Yourself (DIY) Air Cleaners**

Do-it-yourself (DIY) air cleaners using box fan(s) and MERV 13 filter(s) can provide air cleaning similar to commercial air cleaners and may offer some protection from smoke indoors. Advice on putting these together can be found online.<sup>(102)</sup> Studies have demonstrated that these DIY cleaners are an effective approach to achieve cleaner indoor air in a laboratory.<sup>(103,104)</sup> More information on the limitations and proper use of DIY air cleaners, including information on multiple DIY air cleaner configurations using one to five with two or more filters is available online.<sup>(93)</sup> More filters will increase the filter area and lessen the pressure drop, reducing burden on the fan motor. In addition, DIY air cleaner designs with ~~a cardboard shroud~~ and multiple filters increase the cost effectiveness of DIY air cleaners. The EPA provides guidance for the clean air delivery rate (CADR) of various DIY filter configuration assemblies.<sup>(93)</sup>

DIY air cleaners are almost completely ineffective with dirty filters, and filters will need to be replaced frequently during smoke events; the duration of filter lifespan will vary with use and conditions.

To help understand the risks around the possible fire and/or electrical hazards, testing was conducted by Underwriter's Laboratory (UL), in collaboration with the EPA. The testing demonstrated that the box fans that were evaluated for the report with MERV 13 filters did not reach unsafe temperatures under the conditions measured in the testing (which included filters loaded with smoke and a simulation of an extreme scenario where the front and back of the fan were both blocked for an extended period of seven hours).<sup>(105)</sup>



To reduce the risk of fire and/or electrical hazards, it is recommended that only newer box fans manufactured since 2012, which have added safety features of fused plugs and thermal cutoffs, be used. Users who construct a DIY air cleaner should ensure that fan manufacturers have stated in their use and care literature, labeling, or packaging that they support the application and have designed their products for this application.

Fans that have been verified to meet the UL 507-2022 safety standard for electric fans or equivalent can be identified by the UL or ETL safety marking.<sup>(106,107)</sup> Use of extension cords is not recommended as the motor is working harder than designed. DIY air cleaners tend to be noisier and produce more heat than commercially available air cleaners, which may hinder use. ~~These fans~~ DIY air cleaners should not be placed near water. Users should read the fan's safety information and follow the fan's operating instructions. ~~Users who construct a DIY air cleaner should ensure that fan manufacturers have stated in their use and care literature, labeling, or packaging that they support the application and have designed their products for this application.~~

Additional guidance on the use, limitations, and assembly of DIY air cleaners is available online, for example:

- EPA: "Research on DIY Air Cleaners to Reduce Wildfire Smoke Indoors"<sup>(93)</sup>
- Chemical Insights Research Institute of Underwriters Laboratories Research Institute: "Use of Do-It-Yourself Filtration Devices During Wildfires, UL200A, 2022"<sup>(130)</sup>
- The Corsi-Rosenthal Foundation: DIY instructions for a four filter Corsi-Rosenthal box configuration.<sup>(131)</sup>

### **6.2.2.3.3 Portable Air Cleaner Operation and Maintenance**

For any room air cleaner, plan to perform routine maintenance on the device as recommended by the manufacturer. An air cleaner that is used frequently in an area affected by wildland fire smoke may require more frequent filter changes. If the filter is changing color or if the level of airflow coming out of the air cleaner drops, it could mean the filter should be changed. DIY air cleaners can be almost completely ineffective with dirty filters, highlighting the need for frequent filter replacement during smoke events.<sup>(103)</sup> It is recommended to keep extra filters on hand, especially during wildfire season. Some air cleaners do not require filters, relying instead on an electrostatic precipitator (ESP), which charges particles and attracts them to a plate. The plate requires periodic cleaning according to the manufacturer's instructions.

Position PACs in the room such that airflow is unobstructed. Placement near any indoor sources of PM<sub>2.5</sub>, or near where occupants spend time may be most effective. If the device causes uncomfortable drafts, redirect the airflow.

PACs can be operated at various fan speeds (airflows). The higher the flow, the more air will be moved through the filtration system. However, higher fan speeds often generate more noise, which may be disruptive to the intended use of the space. It is important that the air cleaner be operated in a manner to encourage its use. It may be helpful to inform occupants of the purpose and intended operation of the PAC to discourage tampering with it. Reducing the airflow setting will reduce the CADR.

Some PACs come with indicators that change color as the air quality changes. Check the manufacturer's instructions to understand whether the indicator is related to PM<sub>2.5</sub> measurements and if there is information on the sensor accuracy. If the air cleaner does not come with an indicator function, it may be helpful to purchase a low-cost air monitor equipped with a PM<sub>2.5</sub> sensor to determine whether the air is being cleaned. If the monitor indicates that air quality is not improving, the PAC may not be large enough for the space. Doors, windows, or other openings may need to be closed, or the filter may need replacement. See Sections 4.10 and 6.2.8 for more information on indoor PM<sub>2.5</sub> monitoring.

Post wildfire season, the PAC should be checked, cleaned, and have the filters replaced if needed. If the units are stored seasonally, dedicated storage space will be needed.

### 6.2.3 Building Automation Systems (BAS)

The Smoke Readiness Plan defines what is needed for facility operations during wildland fire events. Initial steps for the building control systems will include evaluating current controls and settings and determining capabilities for smoke-limiting operation. Check for any BAS design features intended to control and monitor smoke as described in Sections 5.5.1 and 5.5.2.

HVAC controls range from simple single zone thermostats controlling a single HVAC unit's heating and cooling modes of operation, to complex BAS that integrate the controls from multiple units in large buildings. In addition, there are older HVAC systems and BAS that use electric and pneumatic controls. In the U.S., it is estimated that about 85% of small to medium-sized commercial buildings use thermostats exclusively. For these buildings, changes to HVAC system operation under smoke conditions need to be performed manually (see Section 6.2.1 Mechanical Ventilation).

An access, update, and testing policy should be developed in buildings with a BAS. A BAS policy not only facilitates operating the building HVAC system during wildland fire events, the policy is also useful for other incidents impacting IAQ (e.g., SARS CoV-2). ~~Below is A complete~~ a list of essential elements that should be incorporated in this policy, including memorializing current settings and accessing new settings (~~adapted from~~ can be found in the ASHRAE Epidemic Task Force's [Building Readiness](#) guidance).<sup>(92)</sup> Some key points to keep in mind:

- Perform a full backup of all BAS software, databases, programs, graphics, trends, schedules, etc., and store off site either physically or in the cloud.
  - ~~Consider printing them physically or to a pdf so that values can easily be returned when the wildland fire smoke event is over.~~
- Inspect or replace any batteries in building controllers such that databases are not lost during any extended power interruptions.
- If your building is not on a scheduled BAS inspection (either by a 3<sup>rd</sup> party or self-performed), consider performing a preventative maintenance inspection of all systems to ensure proper operation prior to any changes being made. Consider retaining the services of an independent 3<sup>rd</sup> party commissioning service provider (CxP) to help you review the scope of work for any control system modifications and who can verify the systems are functioning as intended.
- ~~Review the access requirements with all parties that the owner wants to have remote access to control systems and company IT networks during the unoccupied or modified mode of operation period.~~
- Determine the level of access and permissions each person with access should have, such as full access to make changes in setpoints, schedules and system programming, schedule overrides only, alerts and notification access only, and view only access.
- ~~Confirm with company IT departments what requirements may be in place to qualify, screen, and approve people for remote access to control systems and company IT networks.~~
- ~~Set each person up as a unique user having unique usernames, passwords, and permission levels so that access and changes to the system can be monitored and documented.~~
- ~~Have a trained and experienced operator review the existing system's remote access features and its interface with anyone who will be given remote access to the system.~~
- Review all alerts, notifications, event logs, and system and control point trend reports prior to making any modifications, and download those reports to create a baseline for comparing the effects of any

changes that may be made in the future. If possible, walk the facility or facilities being controlled and managed by the BAS to become familiar with the location, size, and scale of the control network.

- At a minimum, review system graphics for all system types and buildings to become familiar with the system(s).
- Make note of any communication issues with components, sensors, controllers, buildings, etc., and develop a list of repairs that may need to be made before the system is placed in extended shut down, unoccupied, or partial occupancy modes of operation.
- ~~Review system graphics or text-based reports to determine if temperatures, humidity, CO<sub>2</sub>, airflows (supply, return, OA, exhaust), damper positions, control valve positions, motor speeds, and status are returning or reporting reasonable values.~~
- ~~Use test instruments to verify any questionable information and to spot check a representative quantity of points. Start with verifying critical sensors, such as CO<sub>2</sub> or airflow measuring stations.~~ • Verify critical sensors (such as but not limited to: CO<sub>2</sub> sensors, flow sensors, differential pressure sensors) to ensure they provide accurate data to the BAS. When needed, follow the manufacturer's instructions to complete in-situ (field) calibrations or replace with new sensors.
- Collaborate with the building owner, building users, and building operators and create a plan for modifications to sequences, setpoints, and system operations.
- ~~Note who was in attendance, what was discussed, and any decisions made and implemented at meetings discussing control systems.~~
- Obtain buy-in and approval from key stakeholders before making any changes.
- ~~Repairs to systems involved in this response should be considered essential as any new sequences may not be able to be implemented via the BAS.~~

HVAC and BASs may not be configured to easily access the controls needed for limiting indoor smoke. The graphical user interface (GUI) may need to be modified to show system components and settings needed during a smoke event. The facility operator should review the system's graphics and discuss with the controls contractor how to implement these BAS modifications if they are not readily apparent. This should include:

- Temporary override of the outside air (OA) dampers or fans to reduce amount of outdoor air entering the building;
- Temporary override of economizer operation to reduce reliance on outdoor air for cooling;
- Temporary override of DCV to maintain reduced intake of outdoor air;
- Temporary override of the exhaust airflows to reduce exhaust if less outdoor air is entering the building; and
- Adjust systems to maintain a positive building pressure during the override period.

In the future, more BAS may include PM<sub>2.5</sub> monitors, and the capacity to generate alerts in response to changes in PM<sub>2.5</sub> concentrations, as described in Section 5.5.1.2. These sensors could be placed near the OA intake to detect an increase in particle concentrations due to a wildland fire, and the building operator could adjust the dampers in response. A PM<sub>2.5</sub> monitor in the return air could provide an indication of whether particle concentrations in the indoor air are stable or changing, which can give an indication about whether interventions to reduce smoke concentrations are working. Consider placing PM<sub>2.5</sub> monitors in key indoor locations to provide representation of occupied areas of the building, in hallways and corridors leading to and from a building entrance to assess the smoke ingress in the building(s), and in an outdoor location to assess outdoor air concentrations near the building. See Section 6.2.8 for additional guidance.

Heavy episodes of wildland fire smoke may trigger the smoke detectors in the HVAC systems or occupied areas. When smoke is detected in the HVAC ductwork or occupied space, the smoke detector (duct mounted or area detector) sends a supervisory signal to the alarm control panel, which in many cases, will turn off the related AC unit(s). This is most likely to occur when no smoke mitigation effort has been made as MERV 8 and lower MERV rated filters may not remove sufficient smoke from the indoor air. Management plans should include the possibility of a fire alarm from wildland fire smoke from outside the building and maintaining detection and notification of an internal fire. To minimize false alarm disruptions consider taking these measures:

- Schedule smoke detector cleaning and testing just before wildfire season.
- Implement the recommendations in the Smoke Readiness Plan to protect building occupants.
- Some larger fire alarm systems may be temporarily placed in test mode and a fire watch program implemented in the building. Discuss this option with the local fire department before wildfire season as it may create an unacceptable safety hazard if implemented improperly.

#### **6.2.4 Building Envelope**

Prior to wildfire season, weatherize the building envelope, doors, and windows to reduce smoke infiltration by sealing and caulking cracks. ANSI/ASHRAE/IES Standard 100-2018 describes at a high level the requirements for operations and maintenance related to the building envelope and energy efficiency, and elements of this standard have application to wildland fires.<sup>(54)</sup> Specifically, making a building energy efficient by doing things like replacing obviously broken or missing windows and repairing or replacing door closers on exterior doors also keeps out wildland fire smoke. Elements that can allow infiltration at the top of the building include skylights, hanging fixtures, roof vents, rooftop mounted HVAC equipment, security cameras, and roof access doors. Lower in the building, soffits, service penetrations, and doors may allow smoke infiltration. Check vertical shafts, plumbing stacks, conduits, hallway pressurization shafts, ventilation shafts, service shafts, and fire exit doors for outdoor air paths. Check the envelope: outside walls and openings, windowsills, baseboards, and electrical receptacles for air infiltration. Elements and renovations added post-construction that penetrate the building envelope are often poorly sealed.

To determine if these elements are well sealed, use the following methods:

- **Visual inspection:** Look for visible openings in the envelope. A thermal camera is useful to quickly find envelope problems.
- **Physical inspection:** Feel for drafts, cold spots, inconsistent temperatures, and window condensation (indicative of cold air leaking around windows). Also look for areas where outside noise is more prevalent. Lastly, use odor to identify areas to investigate for infiltration.
- **Professional energy audits:** Bring in a professional to conduct an air leakage site detection test following a standard such as ASTM 1186-17.<sup>(90)</sup> Thermographic scans and infrared photography can also be used. These images can determine leaks from examining where energy is being lost. It may be beneficial to conduct an initial audit, make repairs, and then conduct a second audit to ensure that problems have been adequately addressed.

ANSI/ASHRAE Standard 62.1-2022, provides minimum ventilation rates and other measures for acceptable IAQ for commercial buildings.<sup>(56)</sup> The standard specifies ventilation rates needed for different zones in the building depending on use, and the rates are calculated based on the expected number of persons and the size of the space.

Once leaks have been identified and ventilation is determined to be sufficient, seal the building in this order: top of building, bottom of building (meaning ground floor and any floors below grade), vertical shafts, and finally, outside walls. The following specific approaches can be used for sealing stationary elements<sup>(108)</sup>:

- Caulking around window and door frames and casings with silicone caulk.
- Caulking around glass panes in windows and doors with clear silicone caulk.
- Sealing areas around wall and ceiling penetrations. For smaller areas, this can be done with caulk. Larger areas might require that insulation or other material be fitted into the openings. Spray-foam insulation is effective for sealing medium-sized holes and gaps.
- Sealing or caulking around electrical outlets and switches.
- Making sure HVAC ductwork sections fit together tightly and connections are sealed with mastic or metal tape to stop leaks.

Movable building components should be sealed via weatherstripping. Important considerations when choosing a weatherstripping method include whether it can withstand weather changes, friction, and wear and tear when deployed in its specific location. It should provide a good seal when the door or window is

closed but allow it to open freely. For further guidance, including best types of weatherstripping for each application, see the *US Department of Energy Guide to Air Sealing Your Home*.<sup>(109)</sup>

In addition to sealing the building envelope, it is important to keep the building at positive pressure during a wildland fire smoke incident. See Section 6.2.1 for a discussion on how to configure the HVAC system to have the building operate at positive pressure.

### **6.2.5 Dedicated Cleaner Air Spaces**

### **6.2.6 Maintaining Space Conditioning and Reducing Odors**

Using a mitigation strategy of temporarily limiting outdoor air ventilation and exhaust airflows could affect indoor space conditions. Depending on the outdoor environment, reduced ventilation rates could cause building systems to struggle to maintain acceptable temperature and relative humidity. A qualified professional should evaluate the building systems to ensure that any modifications do not create concerns. As discussed in Section 6.2.7, attention should be paid to reducing indoor sources of air pollutants during wildland fire smoke events.

Odors are subjective, but steps can be taken to try to reduce VOCs that have infiltrated the building during a smoke event, which may be a source of odor. Adding a filter with activated carbon to the air intake vent ~~may help control odors~~ (see Section 6.2.2.2) or deploying portable air cleaners with activated carbon filters may help control odors. However, the carbon impregnated within the filter may saturate quickly, and multiple filters may be needed. In addition, there are furnace filters and other duct-mounted air cleaning devices designed to either remove gases or ~~convert them to harmless byproducts~~ transform them into other substances. Sorbent media air filters, photocatalytic oxidation, ionization, and intentional ozone generators sold as air cleaners (the latter should not be used in occupied spaces) are developed for this purpose. It is recommended to only use devices that meet Section 5.7 of ASHRAE Standard 62.1-2022<sup>(56)</sup>. It should be noted that some evidence suggests that certain gas-phase air cleaning technologies produce byproducts for which the potential health impacts have not been well characterized.<sup>(132, 133)</sup> Caution is advised when selecting gas-phase air cleaning devices.

ANSI/ASHRAE Standard 145.2-2016 can be used to evaluate the effectiveness of gas-phase filtration for some devices which can be installed in the ductwork of HVAC systems.<sup>(111)</sup> However, since gas-phase filtration is not widely used, little data exist on device effectiveness and there are concerns about toxic byproducts. EPA's *Residential Air Cleaners: A Technical Summary* provides additional information about these devices in the context of residential buildings.<sup>(99)</sup>

### **6.2.7 Administrative Controls**

In addition to HVAC-related actions that are discussed in the following text, the Smoke Readiness Plan should include administrative steps to reduce smoke exposures within the facility. Concerns to be addressed will depend on the activities taking place in the building.

*Reduce Indoor Sources of Particulate Matter.* During wildland fire smoke events, it is critical to limit behaviors that result in the indoor generation of additional PM. One important focus is reducing indoor air pollution sources, e.g., avoiding activities that generate indoor pollutants. Cooking, burning candles, incense, or wood; using sprays, diffused essential oils, or air fresheners, vacuum cleaning (unless using appropriate equipment as described in *Indoor Cleaning*), use of printers or copiers, and smoking are examples of activities that can increase indoor PM<sub>2.5</sub> concentrations.<sup>(99)</sup> Understanding potential sources of air pollution in the building can assist in the reduction of these sources during wildland fire events. In addition, when the percentage of outdoor air relative to recirculating air is lower, as would occur in smoke-ready mode, it is critical to reduce the generation of indoor air pollutants.

*Indoor Cleaning.* Vacuuming can be helpful to keep indoor surfaces and carpets clean and may be especially helpful for reducing particle resuspension if surfaces are thoroughly cleaned before a smoke event. If vacuuming during a smoke event, appropriate equipment should be used to avoid resuspending dust and other contaminants in the indoor air. A central vacuum cleaner system can be used, provided it is vented to the outside and the exhaust vents are at least 10 ft from ventilation system air inlets. HEPA-filter vacuum cleaners or HEPA-equivalent vacuum cleaners can also be used, preferably those which have been tested to ASTM F3150-18.<sup>(112)</sup>

*Limit Door Usage Where Possible.* During smoke events, plan to limit the use of allowable building entrances and exits to ones with a vestibule or airlock. If this is not possible, prepare to limit door use to only the doors on the least impacted side of the building during the smoke event (consider prevailing winds when selecting entrances that will be open). Use of doors connected to outside patios and other break areas that are not necessary for safe egress should be restricted during periods of smoke impact. In advance, prepare signage to use on doors that will remain closed.

*Loading Docks and Other Frequently Used Entryways.* Loading docks can be major sources of smoke during a wildland fire.<sup>(55)</sup> Consider adding an air curtain, which produces a high velocity airstream that will help to prevent aerosols, like smoke, from entering the loading dock space. Air curtains can also be added to other frequently used doors and entryways. Consider retrofitting the most frequently used traditional doors with revolving doors, where possible, to reduce the amount of outdoor air, including smoke, coming into the building.

*Personal Protective Equipment May Be Needed.* If building personnel will conduct activities outdoors when there are high levels of smoke (for example, checking the rooftop HVAC units), they should be provided adequate personal protective equipment (PPE), specifically N95 or other NIOSH-approved particulate filtering facepiece respirators. Similarly, personnel in large, unconditioned spaces (such as warehouses) may need to use PPE, such as respirators. CDC NIOSH guidance provides recommendations for reducing smoke exposures for wildland firefighters and other outdoor workers, including the use of N95 or similar respirators.<sup>(113)</sup> Some local or regional authorities may have additional recommendations. The Occupational Safety and Health Administration (OSHA) has requirements employers must follow when respirators are required and recommendations for when respirators are used on a voluntary basis in occupational settings.<sup>(114)</sup> During wildfire season, N95 respirators may be in short supply. Consider purchasing anticipated supplies and implementing respiratory protection requirements prior to the start of the season.


*Reducing Physical Activity.* Consideration should be given to reducing the level of physical activity to help reduce CO<sub>2</sub> buildup.

## **6.2.8 Indoor and Outdoor PM<sub>2.5</sub> Monitoring**

Indoor monitoring of PM<sub>2.5</sub> can help determine if outdoor smoke is penetrating the building. In Section 5.5.1, information about PM<sub>2.5</sub> sensors is provided, and considerations related to permanently installed PM<sub>2.5</sub> monitors are described. If the building does not have any installed monitors, consider purchasing one or more low-cost air monitors equipped with a PM<sub>2.5</sub> sensor prior to the wildfire season. Install the monitors in the facility, aiming to stay away from potential indoor sources of PM<sub>2.5</sub>. Preferably, one or more monitors would be located in areas representative of general building use, and one monitor would be located in a planned temporary cleaner air space. If permanently installed monitors are not feasible, facilities operations personnel should be equipped with handheld PM<sub>2.5</sub> monitors. When using handheld sensors or monitors, conditions can change dramatically. It is important to repeat measurements, including comparisons between spaces and between indoors and outdoors. It can be helpful when making indoor to outdoor comparisons to use the same sensor or monitor model. It may be more difficult to interpret indoor to outdoor differences

when different types of sensors/monitors are used, especially when measurement approaches and averaging times vary.

**Figure 7** illustrates outdoor concentrations of PM<sub>2.5</sub> during a wildfire smoke episode, and how indoor PM<sub>2.5</sub> declined after installation of HEPA filter air cleaners. As discussed in Sections 4.10 and 5.5.1.2, PM<sub>2.5</sub> sensors will not be as accurate as high-quality regulatory monitors, but they can show whether interventions are reducing indoor PM<sub>2.5</sub> concentrations. For example, upward trends in PM<sub>2.5</sub> concentrations might indicate that doors or windows are open, HVAC air filters are degrading, PACs should be turned on, or that there is an indoor source of PM<sub>2.5</sub> that should be addressed (especially when outdoor PM<sub>2.5</sub> concentrations are not showing the same upward trend). Since indoor activities can generate PM<sub>2.5</sub>, it is critical to place the sensor at its projected location prior to a smoke event to understand how the background concentrations change as a function of occupancy and activities in the building. For example, it may be typical that indoor PM<sub>2.5</sub> concentrations increase somewhat during the day when the building is occupied. In the Smoke Readiness Plan, document typical PM<sub>2.5</sub> concentrations and include procedures for how data from both temporary and permanent monitors will be accessed and evaluated.

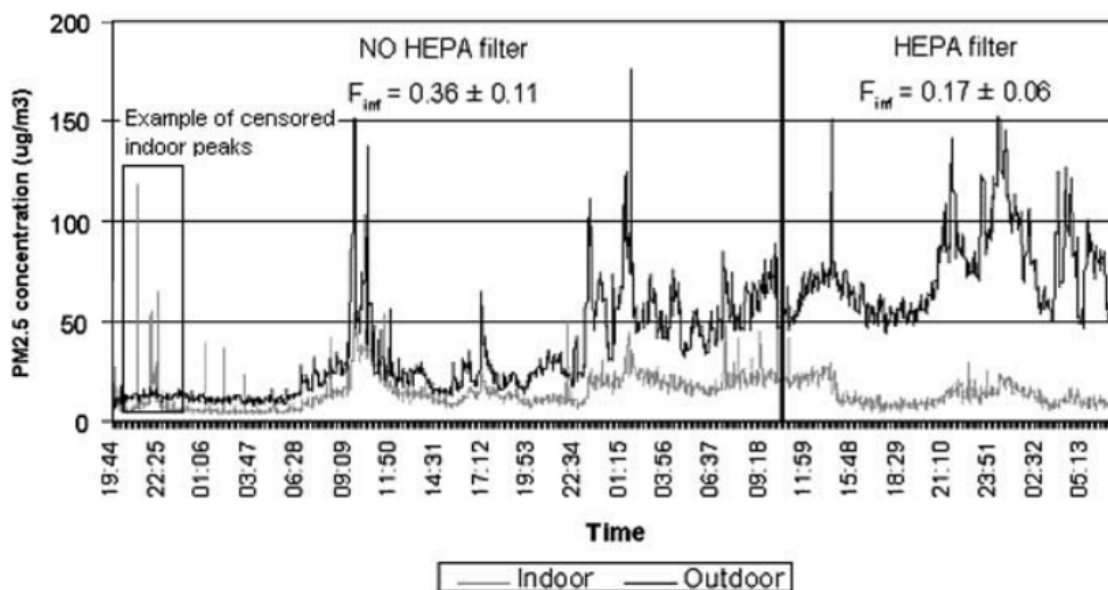

**Figure 7.** Indoor and outdoor PM<sub>2.5</sub> concentrations in a home measured with and without use of an air cleaner with a HEPA filter.<sup>(115)</sup>

For outdoor PM<sub>2.5</sub> concentrations, check local air quality conditions on websites such as AirNow.gov (NowCast), including the Fire and Smoke Map <sup>(79)</sup> for more detailed information on air quality in areas impacted by wildland fire smoke, and state websites<sup>(116)</sup>.

Note that AirNow and the Fire and Smoke Map use an algorithm called the NowCast to show air quality conditions for the current hour based on the previous 3 to 12 hours of PM<sub>2.5</sub> data, using the shorter averaging period when air quality is changing rapidly. However, when making decisions during rapidly changing wildfire smoke conditions, it can be helpful to view air quality trends on a shorter timescale than the NowCast. On the Fire and Smoke Map, looking at the sensor “Trend” shows the AQI category based on data from the last 30 minutes, and the “Recent History” shows 10-minute concentrations over the last 24 hours.



If adequate public information on air quality is available in the area, it is not necessary to install a dedicated outdoor PM<sub>2.5</sub> monitor for the building. If there is not adequate information for the area, consider installing an outdoor monitor as well (see US EPA Air Sensor Toolbox, Outdoor Sampling Considerations <sup>(77)</sup>).

## 6.2.9 Special Considerations for Healthcare Facilities, Schools, and Other Institutions

Protecting public health and wellbeing is important for all buildings, including special facilities highlighted in this subsection.

### 6.2.9.1 Hospitals

### 6.2.9.2 Schools

Schools should follow the guidelines in this document and any applicable guidance from federal, state, local, or other relevant jurisdictions to prepare for smoke, keeping in mind that they house at-risk populations. As described in Section 4.6, children are potentially at-risk of experiencing health effects related to exposure to wildland fire smoke, and advance planning is needed to minimize smoke exposure. A school's Smoke Readiness Plan should carefully address issues such as:

- **School activity modifications and cancellation.** ~~During a wildfire, the biggest issue is whether to cancel school. Although it may appear that Schools may need to modify student activities as the outdoor air quality changes, such as by bringing children indoors, or reducing their physical activity. Before closing a school or cancelling school activities, is the best option during a smoke event, there are schools should consider impacts on health and safety, equity, and instructional time considerations.~~ See guidance from California school and air pollution agencies and Washington State Department of Ecology and Department of Health for a discussion of these considerations.<sup>(117,118)</sup> ~~This guidance also suggests how to modify student activities as the outdoor air quality changes.~~
- **HVAC preparation.** In the planning phase, school facility managers should consult with HVAC professionals to understand the usual settings for their system (e.g., often, ventilation rates are high) and how those settings can be controlled during a smoke event. The steps to make changes in the settings should be clearly identified. Additionally, smoke entering the building can be reduced by limiting the intake of outdoor air during unoccupied hours and in unoccupied parts of the building. If smoke arrives and the intake of outdoor air is reduced to limit smoke coming into the building, the air intake should be returned to normal as soon as possible after smoke clears (see Section 6.5).
- **Indoor PM<sub>2.5</sub> monitoring.** An indoor or handheld PM<sub>2.5</sub> monitor can provide immediate information on IAQ, which is critical for protecting at-risk populations (see Sections 4.10 and 6.2.8). Consider purchasing one or more PM<sub>2.5</sub> monitors so that changes in indoor PM<sub>2.5</sub> concentrations can be detected when a smoke event occurs. The Smoke Readiness Plan should define what steps should be taken if PM<sub>2.5</sub> concentrations begin to rise.
- **Schools that rely on natural ventilation.** Schools in northern climates may not have central air systems. To the extent feasible, these schools could prepare for smoke by purchasing PACs and one or more PM<sub>2.5</sub> monitors. If a smoke event occurs, windows and doors should be closed, and PACs deployed and turned on. Indoor temperatures should be monitored in buildings with no air conditioners, closing doors and windows may increase indoor temperatures, potentially increasing the risk of heat-related health effects. When outdoor smoke clears, window and doors should be opened promptly to help in clearing the indoor air and providing cooling.

### **6.2.9.3 Restaurants, Hospitals, Schools, and Other Buildings with Commercial Kitchens and Other Dedicated Exhaust Systems**

~~Restaurants, hospitals, schools, and other buildings with commercial kitchens, laundries, laboratories, and other containment areas will have large vent hoods and large exhaust systems with exhaust fans over the cooking range. These vent hoods exhaust systems are designed to ensure proper removal of combustion harmful gases, and other odors, moisture, and other airborne contaminants, formed during cooking and use of gas burning appliances. Because these fans pull a lot of air out of the kitchen, the ventilation system is typically designed to bring enough provide adequate OA into the kitchen to maintain the kitchen at the design space pressure (just enough to keep the kitchen odors and other possible combustion products from spreading to other spaces). In addition, other dedicated exhausts such as for laundry facilities must be considered. Careful consideration of the exhaust type and purpose is needed prior to modifying airflows to reduce the quantity of OA and accompanying smoke.~~

In many commercial kitchens ~~cases~~, the OA coming in will have an inadequate filter or no filter at all. To avoid bringing in smoky air, the cooking appliances and vent hood exhaust should remain off; plan ahead for cold food choices or alternative cooking methods which will not produce combustion products, such as microwave ovens or induction hotplates. Other options to consider include adding supplemental filtration to the make-up air and providing N95 masks to protect kitchen workers. Note that adding filtration may impact airflow. It is essential to confirm proper function of exhaust systems prior to implementation.

### **6.2.9.4 Prisons/Detention Centers**

### **6.2.9.5 Multi-unit Residential Buildings**

It is important to investigate and understand the HVAC equipment serving common areas and dwelling areas of multi-unit residential buildings. Most of the considerations in Section 6 also apply to common areas in multi-unit residential buildings.

If dwelling units have independent heating and cooling systems, occupants may need to take action to reduce smoke exposure within their unit. In appropriate settings, the building manager may need to provide a large number of filters and supplemental PACs to protect occupants. In many cases, residents may be asked to provide their own equipment and supplies for air filtration and/or adjust ventilation controls and behaviors to reduce smoke entry into individual units.

As noted in Section 6.2.4, prior to wildfire season, managers for multi-unit residential buildings should weatherize the building envelope, doors, and windows to reduce smoke infiltration by sealing and caulking cracks.

Building managers should consider distributing outreach and educational materials to assist residents with these actions. Existing materials and information may be available from federal, state, or local health or environmental authorities. Some examples include:

- AirNow Wildfire Smoke Factsheets<sup>(119)</sup>
- British Columbia Centre for Disease Control Wildfire Smoke webpage and factsheets<sup>(120)</sup>
- California Air Resources Board Protecting Yourself from Wildfire Smoke<sup>(121)</sup>
- EPA Wildfires and Indoor Air Quality webpage<sup>(122)</sup>

### 6.3 Operational Testing

### 6.4 Maintenance and Monitoring During a Smoke Event

#### 6.4.1 Roles and responsibilities

#### 6.4.2 When to Implement the Smoke-Readiness Plan

The Smoke Readiness Plan should include the information sources to consult in determining when to implement smoke mitigation measures. When wildland fires occur, state and local health departments may issue air quality notifications and guidelines when actions are needed to protect the public from smoke. Local air quality conditions can be found on AirNow.gov and state websites. The US Air Quality Index (AQI), available on AirNow.gov for locations across the US, has six color-coded categories indicating levels of health concern as a function of PM<sub>2.5</sub> concentrations and other criteria air pollutants. The AirNow Fire and Smoke Map<sup>(79)</sup> provides information on PM<sub>2.5</sub> concentrations from both regulatory-grade monitors (operated by air quality agencies and temporary monitors deployed by agencies for smoke events) and low-cost sensors (owned and operated by individuals, organizations, or agencies); fires; and smoke plumes. Building managers should use these sources of information to understand when to initiate the Smoke Readiness Plan. See Table 67 for guidance on when to implement the plan.

**Table 67 - Decision Matrix for Implementation of Smoke Readiness Plan**

Smoke Conditions	Action
No current smoke, and no smoke forecast	Carry on with normal operations. Have Smoke Readiness Plan prepared and ready.
Current smoke OR smoke forecast in coming days	Consider implementing Smoke Readiness Plan. For example, if at-risk populations are likely to be impacted.
Current smoke AND smoke forecast for coming day(s)	Implement Smoke Readiness Plan.

#### 6.4.3 Placing the Building in Smoke-Ready Mode

Implement the Smoke Readiness Plan. **Checklist 2** provides an example for placing a building in smoke-ready mode. A building-specific plan should include a similar checklist, with modifications appropriate for that building. Use the information in Table 45 (Section 6.2.1) to provide building specific parameters.

#### **Checklist 2: Placing Building in Smoke-Ready Mode**

1. Note the PM<sub>2.5</sub> concentrations from the indoor or handheld sensor(s) and the outdoor PM<sub>2.5</sub> concentrations from an appropriate source (e.g., AQI or a nearby outdoor PM<sub>2.5</sub> monitor).
2. Install the higher-rated HVAC recirculation filter.
3. Set BAS controls to unoccupied state to close outdoor air dampers or manually set.
4. Make additional changes to BAS controls (if applicable).
5. Disable or reduce relief fan airflow.
6. Adjust exhaust fans and block exhaust grills, evaluating to maintain occupant safety.
7. ~~Put filters~~ Upgrade filtration level on the OA intake as needed.
8. Set some of the air handlers or rooftop AC unit to recirculation mode.
9. Make sure that spaces are conditioned adequately (e.g., turn on air conditioning system if hot).

10. Set up cleaner air spaces, making sure to properly place the PACs inside the spaces and turn to the correct setting; the highest setting is typically the most effective for air cleaning.
11. Implement administrative controls (e.g., reduce indoor sources of air pollution and restrict number of building entrances).
12. Implement odor controls, if part of the plan.
13. Monitor data from indoor PM<sub>2.5</sub> monitor(s), outdoor PM<sub>2.5</sub> monitors, and other instruments to determine if mitigation measures are working (see Section 6.4.3).

#### **6.4.4 Determining if Mitigation Measures are Working**

#### **6.4.5 What to Do if the Plan Does Not Work**

### **6.5 Returning to Normal Operations**

~~As soon as outdoor smoke clears~~ Criteria for returning to normal operation, similar to Table 7, should be defined for each, the building should return to normal operation. Normal HVAC operation will help to remove any smoke lingering indoors and will improve IAQ. The Smoke Readiness Plan should include a checklist for resuming normal operations, and **Checklist 3** provides an example of the topics to address. This list will largely involve reversing the changes made during the smoke event, relying on the documentation developed for normal operations and any additional notations made during the event. Dirty filters should be changed to avoid circulation of odors that may remain from the smoke.

In addition to reversing building HVAC system settings and removing filters, ash may need to be removed from building surfaces. Wear appropriate PPE when cleaning up ash. Avoid actions that kick ash particles up into the air, such as dry sweeping or leaf blowers. Before sweeping indoor and outdoor hard surfaces, mist them with water to keep dust down, and follow with wet mopping. For areas lightly dusted with ash, use a damp cloth or wet mop to wet down ash. Whenever using water, use as little water as possible and do not rinse ash into drains. Commercial cleaning may be needed for carpet, upholstery, and window treatments. Clean and sanitize food contact areas and any items that may facilitate ash ingestion. Collected ash may be disposed of in the regular trash and should be stored in plastic bags or other containers to prevent it from being stirred up. <sup>(110)</sup>

#### **Checklist 3: Returning the building to normal operations**

1. Refer to documentation and photos of the original settings and follow in reverse order.
2. Re-connect and/or re-enable OA dampers.
3. Return thermostat and control setting to pre-smoke settings.
4. Remove outdoor intake temporary filters.
5. Inspect and change return air filters to the type used for normal operation.
6. Re-enable economizer and DCV systems.
7. Verify operation of system after returning to normal.
8. Clean indoor surfaces to remove ash deposited from the smoke.

Review and, as appropriate, update the Smoke Readiness Plan and/or the normal operating procedures based on lessons learned during the wildland fire smoke event.

## **7 REFERENCES.**

1. Nimmo DG, Carthey AJR, Jolly CJ, Blumstein DT. Welcome to the Pyrocene: Animal survival in the age of megafire. *Glob Change Biol.* 2021;27(22):5684–93.
2. Doerr SH, Santín C. Global trends in wildfire and its impacts: perceptions versus realities in a changing world. *Philos Trans R Soc B Biol Sci.* 2016 Jun 5;371(1696):20150345.
3. Lake FK, Christianson AC. Indigenous Fire Stewardship. In: Manzello SL, editor. *Encyclopedia of Wildfires and Wildland-Urban Interface (WUI) Fires* [Internet]. Cham: Springer International Publishing; 2019 [cited 2023 May 16]. p. 1–9. Available from: [https://doi.org/10.1007/978-3-319-51727-8\\_225-1](https://doi.org/10.1007/978-3-319-51727-8_225-1)
4. Steel ZL, Safford HD, Viers JH. The fire frequency-severity relationship and the legacy of fire suppression in California forests. *Ecosphere.* 2015;6(1):art8.
5. Jolly WM, Cochrane MA, Freeborn PH, Holden ZA, Brown TJ, Williamson GJ, et al. Climate-induced variations in global wildfire danger from 1979 to 2013. *Nat Commun.* 2015 Jul 14;6(1):7537.
6. Cattau ME, Wessman C, Mahood A, Balch JK. Anthropogenic and lightning-started fires are becoming larger and more frequent over a longer season length in the U.S.A. *Glob Ecol Biogeogr.* 2020;29(4):668–81.
7. Reisen F, Duran SM, Flannigan M, Elliott C, Rideout K. Wildfire smoke and public health risk. *Int J Wildland Fire.* 2015;24(8):1029.
8. Junghenn Noyes KT, Kahn RA, Limbacher JA, Li Z, Fenn MA, Giles DM, et al. Wildfire Smoke Particle Properties and Evolution, From Space-Based Multi-Angle Imaging II: The Williams Flats Fire during the FIREX-AQ Campaign. *Remote Sens.* 2020 Jan;12(22):3823.
9. Suh HH, Bahadori T, Vallarino J, Spengler JD. Criteria air pollutants and toxic air pollutants. *Environ Health Perspect.* 2000 Aug;108(suppl 4):625–33.
10. Boaggio K, LeDuc SD, Rice RB, Duffney PF, Foley KM, Holder AL, et al. Beyond Particulate Matter Mass: Heightened Levels of Lead and Other Pollutants Associated with Destructive Fire Events in California. *Environ Sci Technol.* 2022 Oct 18;56(20):14272–83.
11. Evtyugina M, Calvo AI, Nunes T, Alves C, Fernandes AP, Tarelho L, et al. VOC emissions of smouldering combustion from Mediterranean wildfires in central Portugal. *Atmos Environ.* 2013 Jan 1;64:339–48.
12. Miller DD, Bajracharya A, Dickinson GN, Durbin TA, McGarry JKP, Moser EP, et al. Diffusive uptake rates for passive air sampling: Application to volatile organic compound exposure during FIREX-AQ campaign. *Chemosphere.* 2022 Jan 1;287:131808.
13. Dickinson GN, Miller DD, Bajracharya A, Bruchard W, Durbin TA, McGarry JKP, et al. Health Risk Implications of Volatile Organic Compounds in Wildfire Smoke During the 2019 FIREX-AQ Campaign and Beyond. *GeoHealth.* 2022;6(8):e2021GH000546.
14. Robinson MA, Decker ZCJ, Barsanti KC, Coggon MM, Flocke FM, Franchin A, et al. Variability and Time of Day Dependence of Ozone Photochemistry in Western Wildfire Plumes. *Environ Sci Technol.* 2021 Aug 3;55(15):10280–90.

15. [Rice RB, Boaggio K, Olson NE, Foley KM, Weaver CP, Sacks JD, McDow SR, Holder AL, LeDuc SD. Wildfires Increase Concentrations of Hazardous Air Pollutants in Downwind Communities. Environmental Science & Technology. 2023 Dec 19.](#)
16. [Ghetu CC, Rohlman D, Smith BW, Scott RP, Adams KA, Hoffman PD, Anderson KA. Wildfire impact on indoor and outdoor PAH air quality. Environmental Science & Technology. 2022 Jul 8;56\(14\):10042-52.](#)
17. [Laguerre A, Gall ET. Polycyclic Aromatic Hydrocarbons \(PAHs\) in Wildfire Smoke Accumulate on Indoor Materials and Create Postsmoke Event Exposure Pathways. Environmental Science & Technology. 2023 Dec 18.](#)
18. [Kohl L, Meng M, de Vera J, Bergquist B, Cooke CA, Hustins S, Jackson B, Chow CW, Chan AW. Limited retention of wildfire-derived PAHs and trace elements in indoor environments. Geophysical Research Letters. 2019 Jan 16;46\(1\):383-91.](#)
19. [Hossain MS, Che W, Frey HC, Lau AK. Factors affecting variability in infiltration of ambient particle and gaseous pollutants into home at urban environment. Building and Environment. 2021 Dec 1;206:108351.](#)
20. [Mazzoli-Rocha F, Fernandes S, Einicker-Lamas M, Zin WA. Roles of oxidative stress in signaling and inflammation induced by particulate matter. Cell Biol Toxicol. 2010 Oct 1;26\(5\):481-98.](#)
21. [Kim KH, Kabir E, Kabir S. A review on the human health impact of airborne particulate matter. Environ Int. 2015 Jan 1;74:136-43.](#)
22. [Anderson JO, Thundiyil JG, Stolbach A. Clearing the Air: A Review of the Effects of Particulate Matter Air Pollution on Human Health. J Med Toxicol. 2012 Jun 1;8\(2\):166-75.](#)
23. [Reid CE, Brauer M, Johnston FH, Jerrett M, Balmes JR, Elliott CT. Critical Review of Health Impacts of Wildfire Smoke Exposure. Environ Health Perspect. 2016 Sep;124\(9\):1334-43.](#)
24. [Liu JC, Pereira G, Uhl SA, Bravo MA, Bell ML. A systematic review of the physical health impacts from non-occupational exposure to wildfire smoke. Environ Res. 2015 Jan 1;136:120-32.](#)
25. [Chen H, Samet JM, Bromberg PA, Tong H. Cardiovascular health impacts of wildfire smoke exposure. Part Fibre Toxicol. 2021 Jan 7;18\(1\):2.](#)
26. [Larkin NK, O'Neill SM, Solomon R, Raffuse S, Strand T, Sullivan DC, et al. The BlueSky smoke modeling framework. Int J Wildland Fire. 2009 Dec 9;18\(8\):906-20.](#)
27. [Chen J, Anderson K, Pavlovic R, Moran MD, Englefield P, Thompson DK, et al. The FireWork v2.0 air quality forecast system with biomass burning emissions from the Canadian Forest Fire Emissions Prediction System v2.03. Geosci Model Dev. 2019 Jul 26;12\(7\):3283-310.](#)
28. [Yao J, Brauer M, Henderson SB. Evaluation of a Wildfire Smoke Forecasting System as a Tool for Public Health Protection. Environ Health Perspect. 2013 Oct;121\(10\):1142-7.](#)
29. [Magzamen S, Gan RW, Liu J, O'Dell K, Ford B, Berg K, et al. Differential Cardiopulmonary Health Impacts of Local and Long-Range Transport of Wildfire Smoke. GeoHealth. 2021;5\(3\):e2020GH000330.](#)

30. Kim YH, King C, Krantz T, Hargrove MM, George IJ, McGee J, et al. The role of fuel type and combustion phase on the toxicity of biomass smoke following inhalation exposure in mice. *Arch Toxicol*. 2019 Jun 1;93(6):1501–13.
31. Atwi K, Wilson SN, Mondal A, Edenfield RC, Symosko Crow KM, El Hajj O, et al. Differential response of human lung epithelial cells to particulate matter in fresh and photochemically aged biomass-burning smoke. *Atmos Environ*. 2022 Feb 15;271:118929.
32. Aguilera R, Corringham T, Gershunov A, Benmarhnia T. Wildfire smoke impacts respiratory health more than fine particles from other sources: observational evidence from Southern California. *Nat Commun*. 2021 Mar 5;12(1):1493.
33. Borchers Arriagada N, Horsley JA, Palmer AJ, Morgan GG, Tham R, Johnston FH. Association between fire smoke fine particulate matter and asthma-related outcomes: Systematic review and meta-analysis. *Environ Res*. 2019 Dec 1;179:108777.
34. Cleland SE, Wyatt LH, Wei L, Paul N, Serre ML, West JJ, et al. Short-Term Exposure to Wildfire Smoke and PM<sub>2.5</sub> and Cognitive Performance in a Brain-Training Game: A Longitudinal Study of U.S. Adults. *Environ Health Perspect*. 2022 Jun;130(6):67005.
35. Black C, Gerriets JE, Fontaine JH, Harper RW, Kenyon NJ, Tablin F, et al. Early Life Wildfire Smoke Exposure Is Associated with Immune Dysregulation and Lung Function Decrements in Adolescence. *Am J Respir Cell Mol Biol*. 2017 May;56(5):657–66.
36. Xi Y, Kshirsagar AV, Wade TJ, Richardson DB, Brookhart MA, Wyatt L, et al. Mortality in US Hemodialysis Patients Following Exposure to Wildfire Smoke. *J Am Soc Nephrol*. 2020 Aug;31(8):1824.
37. Yao J, Brauer M, Wei J, McGrail KM, Johnston FH, Henderson SB. Sub-Daily Exposure to Fine Particulate Matter and Ambulance Dispatches during Wildfire Seasons: A Case-Crossover Study in British Columbia, Canada. *Environ Health Perspect*. 128(6):067006.
38. Yu P, Guo Y, Gao CX, Dimitriadis C, Ikin JF, Del Monaco A, et al. Impacts of High Concentration, Medium Duration Coal Mine Fire Related PM<sub>2.5</sub> on Cancer Incidence: 5-Year Follow-Up of the Hazelwood Health Study. *Environ Health Insights*. 2021 Jan 1;15:11786302211059722.
39. Korsiak J, Pinault L, Christidis T, Burnett RT, Abrahamowicz M, Weichenthal S. Long-term exposure to wildfires and cancer incidence in Canada: a population-based observational cohort study. *Lancet Planet Health*. 2022 May 1;6(5):e400–9.
40. Grant E, Runkle JD. Long-term health effects of wildfire exposure: A scoping review. *J Clim Change Health*. 2022 May 1;6:100110.
41. Vieira SE. The health burden of pollution: the impact of prenatal exposure to air pollutants. *Int J Chron Obstruct Pulmon Dis*. 2015 Jun 10;10(1):1111–21.
42. Amjad S, Chojecki D, Osornio-Vargas A, Ospina MB. Wildfire exposure during pregnancy and the risk of adverse birth outcomes: A systematic review. *Environ Int*. 2021 Nov 1;156:106644.

43. Haikerwal A, Doyle LW, Wark JD, Irving L, Cheong JLY. Wildfire smoke exposure and respiratory health outcomes in young adults born extremely preterm or extremely low birthweight. *Environ Res.* 2021 Jun 1;197:111159.
44. Willson BE, Gee NA, Willits NH, Li L, Zhang Q, Pinkerton KE, et al. Effects of the 2018 Camp Fire on birth outcomes in non-human primates: Case-control study. *Reprod Toxicol.* 2021 Oct 1;105:128–35.
45. Capitanio JP, Del Rosso LA, Gee N, Lasley BL. Adverse biobehavioral effects in infants resulting from pregnant rhesus macaques' exposure to wildfire smoke. *Nat Commun.* 2022 Apr 1;13(1):1774.
46. Bassein J a., dela Pena-Ponce M g., Ganesh S, Lanclus M, Belmens D, Van Holsbeke C, et al. Wildfire Smoke Exposure During Infancy Results in Increased Proinflammatory Cytokine Responses, Impaired Lung Function, and Transgenerational Immune Effects. In: A104 WILDFIRE, BIOMASS, AND WORLD TRADE CENTER EXPOSURES [Internet]. American Thoracic Society; 2019 [cited 2023 May 16]. p. A2480–A2480. (American Thoracic Society International Conference Abstracts). Available from: [https://www.atsjournals.org/doi/10.1164/ajrcm-conference.2019.199.1\\_MeetingAbstracts.A2480](https://www.atsjournals.org/doi/10.1164/ajrcm-conference.2019.199.1_MeetingAbstracts.A2480)
47. Leech JA, Nelson WC, Burnett RT, Aaron S, Raizenne ME. It's about time: A comparison of Canadian and American time–activity patterns. *J Expo Sci Environ Epidemiol.* 2002 Nov;12(6):427–32.
48. Rice MB, Henderson SB, Lambert AA, Cromar KR, Hall JA, Cascio WE, et al. Respiratory Impacts of Wildland Fire Smoke: Future Challenges and Policy Opportunities. An Official American Thoracic Society Workshop Report. *Ann Am Thorac Soc.* 2021 Jun;18(6):921–30.
49. Holm SM, Miller MD, Balmes JR. Health effects of wildfire smoke in children and public health tools: a narrative review. *J Expo Sci Environ Epidemiol.* 2021 Jan;31(1):1–20.
50. Hauptman M, Balmes JR, Miller MD. The hazards of wildfire smoke exposure for children. *Curr Probl Pediatr Adolesc Health Care.* 2020 Feb 1;50(2):100756.
51. Cascio WE. Wildland fire smoke and human health. *Sci Total Environ.* 2018 May 15;624:586–95.
52. Puglisi LB, Wang EA. Health care for people who are incarcerated. *Nat Rev Dis Primer.* 2021 Jul 8;7(1):1–2.
53. Davison G, Barkjohn KK, Hagler GSW, Holder AL, Coefield S, Noonan C, et al. Creating Clean Air Spaces During Wildland Fire Smoke Episodes: Web Summit Summary. *Front Public Health* [Internet]. 2021 [cited 2023 May 16];9. Available from: <https://www.frontiersin.org/articles/10.3389/fpubh.2021.508971>
54. Updated Standard 100 Published | ashrae.org [Internet]. [cited 2023 May 16]. Available from: <https://www.ashrae.org/news/esociety/updated-standard-100-published>
55. US EPA. National Ambient Air Quality Standards. Available from <https://www.epa.gov/indoor-air-quality-iaq/indoor-particulate-matter>
56. ASHRAE. 2022. ANSI/ASHRAE Standard 62.1, *Ventilation for Acceptable Indoor Air Quality*. Atlanta: ASHRAE.



57. Weschler CJ, Shields HC, Naik DV. Indoor Chemistry Involving O<sub>3</sub>, NO, and NO<sub>2</sub> as Evidenced by 14 Months of Measurements at a Site in Southern California. *Environ Sci Technol*. 1994 Nov 1;28(12):2120–32.
58. Lee SC, Chan LY, Chiu MY. Indoor and outdoor air quality investigation at 14 public places in Hong Kong. *Environ Int*. 1999 May 1;25(4):443–50.
59. Liang Y, Sengupta D, Campmier MJ, Lunderberg DM, Apte JS, Goldstein AH. Wildfire smoke impacts on indoor air quality assessed using crowdsourced data in California. *Proc Natl Acad Sci*. 2021 Sep 7;118(36):e2106478118.
60. Nguyen PDM, Martinussen N, Mallach G, Ebrahimi G, Jones K, Zimmerman N, et al. Using Low-Cost Sensors to Assess Fine Particulate Matter Infiltration (PM<sub>2.5</sub>) during a Wildfire Smoke Episode at a Large Inpatient Healthcare Facility. *Int J Environ Res Public Health*. 2021 Jan;18(18):9811.
61. May NW, Dixon C, Jaffe DA. Impact of Wildfire Smoke Events on Indoor Air Quality and Evaluation of a Low-cost Filtration Method. *Aerosol Air Qual Res* [Internet]. 2021 [cited 2023 May 16]; Available from: <https://aaqr.org/articles/aaqr-21-03-tn-0046>
62. Xiang J, Huang CH, Shirai J, Liu Y, Carmona N, Zuidema C, et al. Field measurements of PM<sub>2.5</sub> infiltration factor and portable air cleaner effectiveness during wildfire episodes in US residences. *Sci Total Environ*. 2021 Jun 15;773:145642.
63. Montrose L, Walker ES, Toevs S, Noonan CW. Outdoor and indoor fine particulate matter at skilled nursing facilities in the western United States during wildfire and non-wildfire seasons. *Indoor Air*. 2022;32(6):e13060.
64. O'Dell K, Ford B, Burkhardt J, Magzamen S, Anenberg SC, Bayham J, et al. Outside in: the relationship between indoor and outdoor particulate air quality during wildfire smoke events in western US cities. *Environ Res Health*. 2022 Nov;1(1):015003.
65. Kirk WM, Fuchs M, Huangfu Y, Lima N, O'Keeffe P, Lin B, et al. Indoor air quality and wildfire smoke impacts in the Pacific Northwest. *Sci Technol Built Environ*. 2018 Feb 7;24(2):149–59.
66. Wheeler AJ, Allen RW, Lawrence K, Roulston CT, Powell J, Williamson GJ, et al. Can Public Spaces Effectively Be Used as Cleaner Indoor Air Shelters during Extreme Smoke Events? *Int J Environ Res Public Health*. 2021 Jan;18(8):4085.
67. Pantelic J, Dawe M, Licina D. Use of IoT sensing and occupant surveys for determining the resilience of buildings to forest fire generated PM<sub>2.5</sub>. *PLOS ONE*. 2019 Oct 16;14(10):e0223136.
68. Ambient (outdoor) air pollution [Internet]. [cited 2023 May 16]. Available from: [https://www.who.int/news-room/fact-sheets/detail/ambient-\(outdoor\)-air-quality-and-health](https://www.who.int/news-room/fact-sheets/detail/ambient-(outdoor)-air-quality-and-health)
69. US EPA. National Ambient Air Quality Standards. Available from <https://www.epa.gov/pm-pollution/timeline-particulate-matter-pm-national-ambient-air-quality-standards-naaqs>
70. A paradigm shift to combat indoor respiratory infection | Science [Internet]. [cited 2023 May 16]. Available from: <https://www.science.org/doi/10.1126/science.abg2025>

71. The Enhanced Air Sensor Guidebook [Internet]. [cited 2023 May 16]. Available from: [https://cfpub.epa.gov/si/si\\_public\\_record\\_Report.cfm?dirEntryId=356426&Lab=CEMM](https://cfpub.epa.gov/si/si_public_record_Report.cfm?dirEntryId=356426&Lab=CEMM)
72. ASHRAE. 2017. ANSI/ASHRAE Standard 52.2, *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: ASHRAE
73. Azimi P, Zhao D, Stephens B. Estimates of HVAC filtration efficiency for fine and ultrafine particles of outdoor origin. *Atmos Environ*. 2014 Dec 1;98:337–46.
74. ASHRAE. 2021. Handbook of Fundamentals Chapter 16 Ventilation and Infiltration.
75. Monitors | RESET® [Internet]. [cited 2023 May 16]. Available from: <https://www.reset.build/directory/monitors>
76. AQ-SPEC Home Page [Internet]. [cited 2023 May 17]. Available from: <http://www.aqmd.gov/aq-spec>
77. US EPA O. Air Sensor Toolbox [Internet]. 2016 [cited 2023 May 16]. Available from: <https://www.epa.gov/air-sensor-toolbox>
78. Demanega I, Mujan I, Singer BC, Anđelković AS, Babich F, Licina D. Performance assessment of low-cost environmental monitors and single sensors under variable indoor air quality and thermal conditions. *Build Environ*. 2021 Jan;187:107415.
79. Airnow. Fire and Smoke Map. Available from <http://www.airnow.gov>.
80. US EPA O. A Guide to Siting and Installing Air Sensors [Internet]. 2021 [cited 2023 May 16]. Available from: <https://www.epa.gov/air-sensor-toolbox/guide-siting-and-installing-air-sensors>
81. US EPA O. How to Use Air Sensors: Air Sensor Guidebook [Internet]. 2016 [cited 2023 May 16]. Available from: <https://www.epa.gov/air-sensor-toolbox/how-use-air-sensors-air-sensor-guidebook>
82. ASHRAE. 2022. ANSI/ASHRAE Standard 90.1, *Energy Standard for Sites and Buildings Except Low-Rise Residential Buildings*. Atlanta: ASHRAE.
83. AMCA. 2018. ANSI/AMCA Standard 500-D, *Laboratory Methods of Testing Dampers for Rating*. AMCA: Arlington Heights, IL .
84. ISO. 2016. ISO 16890-1, *Air filters for general ventilation — Part 1: Technical specifications, requirements and classification system based upon particulate matter efficiency (ePM)*.
85. Indoor Air Quality Guide [Internet]. [cited 2023 May 16]. Available from: <https://www.ashrae.org/technical-resources/bookstore/indoor-air-quality-guide>
86. ASHRAE. 2023. ANSI/ASHRAE Standard 241, *Control of Infectious Aerosols*. Atlanta: ASHRAE.
87. ASTM. 2019. ASTM E779, *Standard Test Method for Determining Air Leakage Rate by Fan Pressurization*.

88. ASTM. 2018. ASTM E3158, *Standard Test Method for Measuring the Air Leakage Rate of a Large or Multizone Building*.
89. Standard Test Method for Determining Rate of Air Leakage Through Exterior Windows, Skylights, Curtain Walls, and Doors Under Specified Pressure Differences Across the Specimen [Internet]. [cited 2023 May 16]. Available from: [https://www.astm.org/e0283\\_e0283m-19.html](https://www.astm.org/e0283_e0283m-19.html)
90. Standard Practices for Air Leakage Site Detection in Building Envelopes and Air Barrier Systems [Internet]. [cited 2023 May 16]. Available from: <https://www.astm.org/e1186-22.html>
91. ANSI/ASHRAE/ACCA. 2018. Standard 180 Standard Practice for Inspection and Maintenance of Commercial Building HVAC Systems
92. ASHRAE EPIDEMIC TASK FORCE BUILDING READINESS [Internet]. 2022. Available from: <https://www.ashrae.org/file%20library/technical%20resources/covid-19/ashrae-building-readiness.pdf>
93. EPA. Research on DIY Air Cleaners to Reduce Wildfire Smoke Indoors [Internet]. [cited 2024 February 29]. Available from: <https://www.epa.gov/air-research/research-diy-air-cleaners-reduce-wildfire-smoke-indoors>
94. NIEHS. Selection and Use of Portable Air Cleaners to Protect Workers from Exposure to SARS-CoV-2. Available from [https://tools.niehs.nih.gov/wetp/public/hasl\\_get\\_blob.cfm?ID=13021](https://tools.niehs.nih.gov/wetp/public/hasl_get_blob.cfm?ID=13021)
95. AHAM. 2020. ANSI/AHAM AC-1-2020. *Method For Measuring Performance Of Portable Household Electric Room Air Cleaners*.
96. Henderson S. Using an Air Cleaner to Manage Wildfire Smoke [Internet]. AHAM Consumer Blog. 2022 [cited 2023 May 16]. Available from: <https://blog.aham.org/using-an-air-cleaner-to-manage-wildfire-smoke/>
97. Azimi P, Stephens B. HVAC filtration for controlling infectious airborne disease transmission in indoor environments: Predicting risk reductions and operational costs. *Build Environ*. 2013 Dec;70:150–60.
98. EPA. 2018. *Guide to Air Cleaners in the Home* 2<sup>nd</sup> Edition.
99. EPA. 2018. *Residential Air Cleaners - A Technical Summary* 3<sup>rd</sup> Edition.
100. Equivalent Outdoor Air Calculator - Google Sheets [Internet]. [cited 2023 May 17]. Available from: [https://docs.google.com/spreadsheets/d/1GUCcjAyhZrTATHD8SQvNcF7JnuWKpadSVT6LA\\_8SUII/edit#gid=0](https://docs.google.com/spreadsheets/d/1GUCcjAyhZrTATHD8SQvNcF7JnuWKpadSVT6LA_8SUII/edit#gid=0)
101. Portable Air Cleaners and Air Changes per Hour [Internet]. AHAM; 2021. Available from: <https://ahamverifide.org/wp-content/uploads/2021/11/White-Paper-Portable-Air-Cleaners-and-Air-Changes-per-Hour-FINAL-00106301.pdf>
102. DIY Air Cleaner to Reduce Wildfire Smoke Indoors [Internet]. EPA; Available from: [https://www.epa.gov/system/files/documents/2021-09/diy-air-purifier-infographic\\_final.pdf](https://www.epa.gov/system/files/documents/2021-09/diy-air-purifier-infographic_final.pdf)

103. Holder AL, Halliday HS, Virtaranta L. Impact of do-it-yourself air cleaner design on the reduction of simulated wildfire smoke in a controlled chamber environment. *Indoor Air*. 2022;32(11):e13163.
104. Eykelbosh A. Do-it-yourself (DIY) air cleaners: Evidence on effectiveness and considerations for safe operation. National Collaborating Centre for Environmental Health.
105. Davis A, Black M. An Evaluation of DIY Air Filtration.
106. UL 507 | UL Standards & Engagement | UL Standard [Internet]. [cited 2023 May 16]. Available from: <https://www.shopulstandards.com/ProductDetail.aspx?UniqueKey=33621>
107. ETL Listed Mark. Available from [intertek.com](http://intertek.com).
- ~~100. ASHRAE. 2022. ANSI/ASHRAE Standard 62.2, *Ventilation for Acceptable Indoor Air Quality in Residential Buildings*. Atlanta: ASHRAE.~~
108. Air Barrier Continuity: A Quick Guide to Sealing Air Leakage Pathways in Buildings. Available from [https://www.buildinggreen.com/sites/default/files/usace\\_airbarriercontinuity.pdf](https://www.buildinggreen.com/sites/default/files/usace_airbarriercontinuity.pdf)
109. Air Sealing Your Home [Internet]. Energy.gov. [cited 2023 May 16]. Available from: <https://www.energy.gov/energysaver/air-sealing-your-home>
110. Wildfire Smoke: A Guide for Public Health Officials | AirNow.gov [Internet]. [cited 2023 May 16]. Available from: <https://www.airnow.gov/publications/wildfire-smoke-guide/wildfire-smoke-a-guide-for-public-health-officials/>
111. ANSI/ASHRAE Standard 145.2-2016 - Laboratory Test Method for Assessing the Performance of Gas-Phase Air-Cleaning Systems: Air-Cleaning Devices [Internet]. [cited 2023 May 16]. Available from: <https://webstore.ansi.org/standards/ashrae/ansiashraestandard1452016>
112. Standard Specification for HEPA Filtration System Performance of Residential and Commercial Vacuum Cleaners [Internet]. [cited 2023 May 16]. Available from: <https://www.astm.org/f3150-18.html>
113. Fighting Wildfires | NIOSH | CDC [Internet]. 2022 [cited 2023 May 16]. Available from: <https://www.cdc.gov/niosh/topics/firefighting/default.html>
114. MAJOR REQUIREMENTS OF OSHA’S RESPIRATORY PROTECTION STANDARD 29 CFR 1910.134 [Internet]. OSHA; Available from: [https://www.osha.gov/sites/default/files/training-library\\_major\\_requirements.pdf](https://www.osha.gov/sites/default/files/training-library_major_requirements.pdf)
115. Barn P, Larson T, Noullett M, Kennedy S, Copes R, Brauer M. Infiltration of forest fire and residential wood smoke: an evaluation of air cleaner effectiveness. *J Expo Sci Environ Epidemiol*. 2008 Sep;18(5):503–11.
116. Smoke Advisories | AirNow.gov [Internet]. AirNow.gov, U.S. EPA; [cited 2023 May 16]. Available from: <https://www.airnow.gov/air-quality-and-health/fires/smoke-advisories>
117. Memo: Get Smart about Wildfire Smoke - Clear Guidelines for Schools and Wildfire Smoke. California Department of Education;

118. Washington State Departments of Health and Ecology. “Wildfire Smoke Guidance for Canceling Events or Activities and Closing Schools” Olympia, WA; June 2023. Available from: [https://doh.wa.gov/sites/default/files/legacy/Documents/4300/334-428-WildfireSmokeClosureGuidance\\_final3.pdf](https://doh.wa.gov/sites/default/files/legacy/Documents/4300/334-428-WildfireSmokeClosureGuidance_final3.pdf)
119. Wildfire Guide Factsheets Publications | AirNow.gov [Internet]. AirNow.gov, U.S. EPA; [cited 2023 May 16]. Available from: <https://www.airnow.gov/wildfire-guide-factsheets>
120. Wildfire Smoke [Internet]. BC Centre for Disease Control. [cited 2023 May 16]. Available from: <http://www.bccdc.ca/health-info/prevention-public-health/wildfire-smoke>
121. Protecting Yourself from Wildfire Smoke | California Air Resources Board [Internet]. [cited 2023 May 16]. Available from: <https://ww2.arb.ca.gov/protecting-yourself-wildfire-smoke>
122. US EPA O. Wildfires and Indoor Air Quality (IAQ) [Internet]. 2018 [cited 2023 May 16]. Available from: <https://www.epa.gov/indoor-air-quality-iaq/wildfires-and-indoor-air-quality-iaq>
123. EPA. Air Quality System. Available from <https://www.epa.gov/aqs>.
124. AirNow. Air Quality Index. Available from <https://www.airnow.gov/aqi/>.
125. US EPA, 2018. *Technical Assistance Document for the Reporting of Daily Air Quality – the Air Quality Index (AQI)*. EPA 454/B-18-007. September 2018.
126. Boaggio, K. 2021. *Smoke from Western Wildfires and Particulate Matter Concentrations*. Committee Meeting for ASHRAE GPC 44P, Protecting Building Occupants from Smoke During Wildfire and Prescribed Burn Events, NA (virtual meeting), NC, December 15, 2021. Available at: [https://cfpub.epa.gov/si/si\\_public\\_record\\_report.cfm?dirEntryId=353950&Lab=CPHEA&simplesearch=0&showcriteria=2&sortby=pubDate&searchall=boaggio&timstype=&datebeginpublishedpresented=03/08/2020](https://cfpub.epa.gov/si/si_public_record_report.cfm?dirEntryId=353950&Lab=CPHEA&simplesearch=0&showcriteria=2&sortby=pubDate&searchall=boaggio&timstype=&datebeginpublishedpresented=03/08/2020).
127. BCCDC. Air Quality Health Index and Wildfire Smoke. Available from [https://www2.gov.bc.ca/assets/gov/environment/air-land-water/air/guides-resources/air\\_quality\\_health\\_index\\_and\\_wildfire\\_smoke\\_faq.pdf](https://www2.gov.bc.ca/assets/gov/environment/air-land-water/air/guides-resources/air_quality_health_index_and_wildfire_smoke_faq.pdf)
128. EPA Victoria. PM2.5 particles in the air. Available from [PM2.5 particles in the air | Environment Protection Authority Victoria \(epa.vic.gov.au\)](https://www.epa.vic.gov.au/pm25-particles-in-the-air)
129. Yao, J., Stieb, D.M., Taylor, E. et al. Assessment of the Air Quality Health Index (AQHI) and four alternate AQHI-Plus amendments for wildfire seasons in British Columbia. *Can J Public Health* 111, 96–106 (2020). <https://doi.org/10.17269/s41997-019-00237-w>
130. Chemical Insights Research Institute of Underwriters Laboratories Research Institute: “Use of Do-It-Yourself Filtration Devices During Wildfires, UL200A, 2022.
131. The Corsi-Rosenthal Foundation: DIY instructions for a four filter Corsi-Rosenthal box configuration. <https://corsirosenthalfoundation.org/instructions/>
132. Collins and Farmer. 2021. Unintended Consequences of Air Cleaning Chemistry. *Environmental Science & Technology*. <https://doi.org/10.1021/acs.est.1c02582>
133. NASEM. 2022. Why Indoor Chemistry Matters. National Academies Press. <https://nap.nationalacademies.org/catalog/26228/why-indoor-chemistry-matters>

**(This appendix is not part of this guideline. It is merely informative and does not contain requirements necessary for conformance to the guideline.)**

## **INFORMATIVE APPENDIX A – ANALYSIS OF PARTICULATE MATTER CONCENTRATIONS DURING RECENT U.S. WESTERN WILDFIRES**


## INFORMATIVE APPENDIX B – MANAGING AIR-SIDE ECONOMIZER AND DEMAND CONTROL VENTILATION FOR SMOKE

Economizer and demand control ventilation (DCV) are control techniques to provide energy savings and maintain indoor air quality (IAQ) by changing the amount of outdoor airflow in occupied buildings. While they are separate systems, they are often combined to control outdoor and return air dampers, relief air dampers, and fans. During wildfire smoke events, normal functioning of these systems can cause unhealthy indoor conditions. Up to 100% of the system airflow can be outdoor air used for cooling or ventilation.

Air-side economizers save energy by keeping the mechanical cooling system off when outdoor air is cool and dry enough to meet the HVAC's cooling requirements. Most roof top HVAC units above ~~5 tons~~ 60,000 btu/h (17.6 kW) capacity are equipped with air-side economizers. (ASHRAE 90.1-2022<sup>(82)</sup> requires economizers on systems above 54,000 btu/h (4.5 tons) (15.8 kW) except in hot humid climates where using outdoor air for cooling is not advisable.) The economizer control also maintains a minimum outdoor air damper position for adequate ventilation, controls relief fans, and may close the outside damper when the building is unoccupied.

There are many equipment and control variations used to provide the air-side economization. Figure B-1 is a typical air handler layout.

Determining what's happening and how it is happening in a particular HVAC unit may be challenging. Research and testing are needed to understand how these systems function at a specific building or within specific units. Gathering the manufacturer's installation and testing instructions will most likely be necessary. Some economizer controls can be a stand-alone controller typically mounted on the air handler or included as part of the control logic in an HVAC controller.

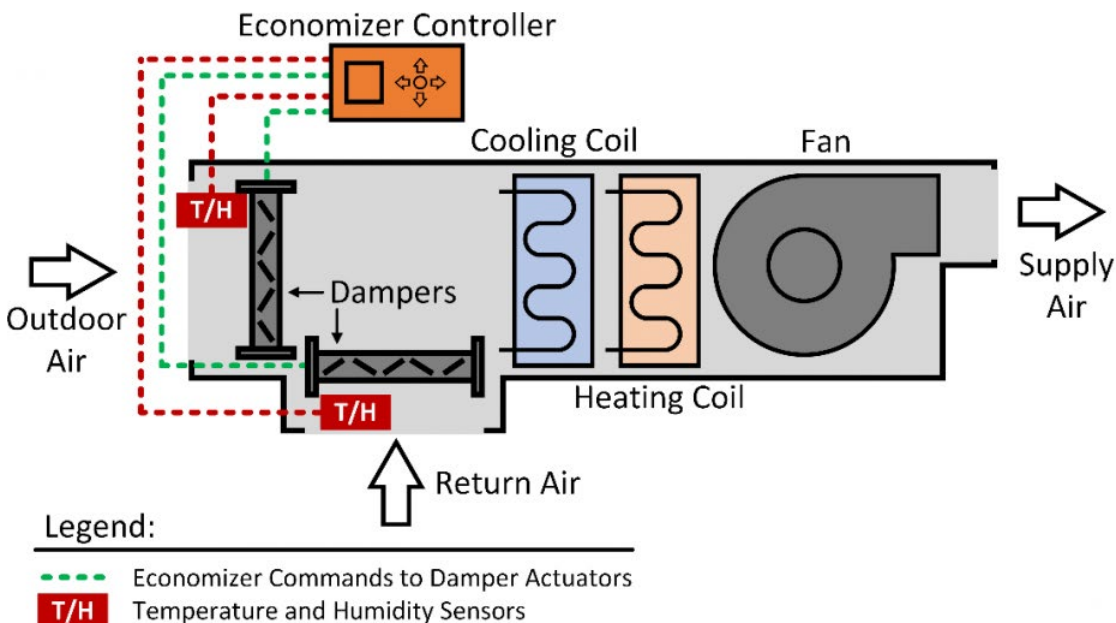

**Figure B-1.** Schematic of an air-side economizer in a unitary HVAC system. The economizer controller may be a stand-alone hardware module or be integrated into the HVAC control. (From <https://www.pnnl.gov/projects/best-practices/air-side-economizers>)

There are at least four common types of economizer controls in use. They are:

*Dry Bulb High Limit:* Sensors detect outdoor air temperature and adjust dampers to allow up to 100% outdoor air to be used for cooling. The high-limit setting acts to enable or disable the economizer function.

*Enthalpy High Limit:* Sensors detect outdoor air temperature and humidity to calculate the total heat of the air also known as enthalpy, then determine if outdoor air can be used to cool a building. The high-limit setting acts as to enable or disable the economizer function.

*Differential Enthalpy Economizer:* Two sensors measure return air and outdoor air enthalpy and adjust dampers to select the air stream providing the lowest enthalpy for cooling.

*Integrated Differential Enthalpy Economizer:* Sensors track return and outdoor air enthalpy and are integrated as the first stage cooling with a multi-stage indoor thermostat or controller. If the outdoor air's temperature and enthalpy are low enough, multi-stage cooling will start with the economizer and mechanical cooling will be activated as additional stages of cooling to meet the cooling demand.

In cooler, dryer climates dry bulb temperature control economizers are generally used. In warmer humid climates, enthalpy control is commonly used. Unfortunately, it is common for economizers to be set up incorrectly or fail as sensors lose calibration, system components age, and maintenance is deferred. As a response to the high failure rate, fault detection and diagnostics (FDD) for economizers have been required since 2018. The FDD reporting systems monitor and report problems with temperature sensors, dampers, operations at inappropriate times, and excess outdoor air. These faults may be displayed on zone thermostats or via a building automation system.

Air-side economizers can also be configured to provide “night cooling” or “night purge” functions depending on building usage and location. These functions should also be temporarily suspended to protect building occupants for the duration of wildfire smoke events.

DCV is a system that provides an automatic increase or reduction of outdoor air intake based on the actual occupancy of spaces. DCV controls use CO<sub>2</sub> sensors as a proxy to monitor building occupancy. (A common example is movie theatres, where outdoor air needs are normally low, except for crowded evening showings. The DCV sequence increases outdoor air in response to a rise in CO<sub>2</sub> indicating high occupancy.)

Temporary disabling of these systems requires research and making a plan for every air handler providing outdoor air. Solutions may be simple or complex. Listed below are a few considerations.

1. The specific technique to limit or increase the outdoor airflow to the minimum setting is dependent on the unique systems and conditions encountered. Professional assistance may be required.
2. The odds are good that the system's economizer is not working properly. The outdoor air damper may be failed closed or open. Sensors or damper actuators may have failed, lost calibration, or been disconnected. See the sample maintenance checklist for air-side economizers at <https://www.pnnl.gov/projects/best-practices/air-side-economizers> for guidance. If the damper has failed closed, leave it closed or block the damper partially open. Check the building pressure and adjust exhaust fans or OA damper until the internal pressure is positive to the outdoor pressure.
3. If the location has a building automation system (BAS), it may be possible to set and override for the outdoor air damper position. Verify the override holds when the economizer is active.
4. If the location has a BAS, it may be possible to simply raise the DCV setpoint, such that less outside air (OA) is demanded by the sequence.



5. Some BAS allow an override of OA temperature sensor. Temporarily setting the temperature to above the economizer high limit may prevent economizer operation.
6. If the building has a commercial thermostat with separated Occupied and Unoccupied times and setpoints, use the unoccupied function.
  - a. Verify the outdoor air damper is closed when the system is operating during the unoccupied setting.
  - b. Temporarily set the unoccupied time and temperature setpoints to include times the building is occupied.
7. ~~It may be possible to temporarily disconnect the OA sensor used by the economizer controls. This will disable the economizer operation. Most economizer systems have a method to override damper position in economizer and DCV operation. If not, it may be possible to temporarily change the setpoint.~~ This should be done by a qualified HVAC technician to verify no other systems are disabled and safety is maintained.
8. ~~It may be possible to temporarily disconnect the OA damper actuator. This should be done by a qualified HVAC technician. Modifying the economizer and DCV operation should always be temporary. It will reduce the energy savings provided by these systems and may impact the required building ventilation, pressurization, and may cause FDD reporting system alarms.~~

-